



Small & Large GW stepped module – Large & Ultimate

READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

NOTE: This is the most complicated unit. Take your time!

LARGE:

Sheets: GSL1, GSL2, GSL3

Small stepped modules:

Assemble the small stepped modules first, before doing the large one.




CAUTION: for the small stepped modules, there are left and right ones.

Ensure that during assembly, the hole for the drawer is once on the left, and once on the right. The back walls and large bottom plates need to be mirrored during assembly for this to work.

SMALL: 2 times

Sheets: GSS1, GSS2

SMALL:

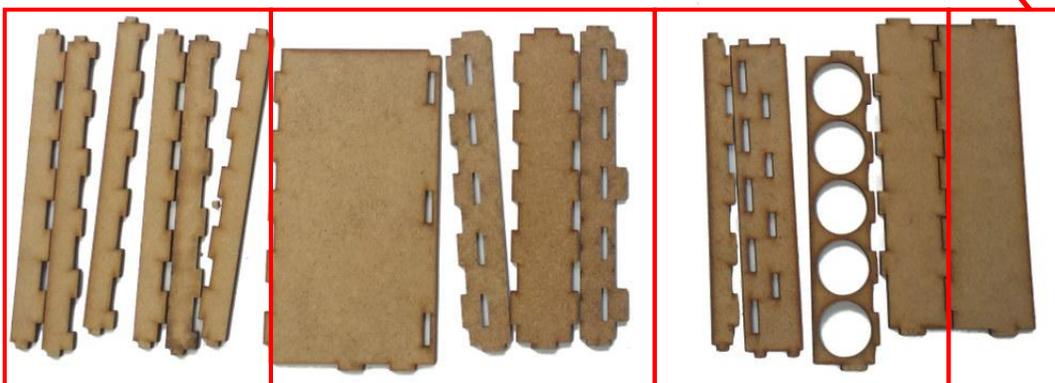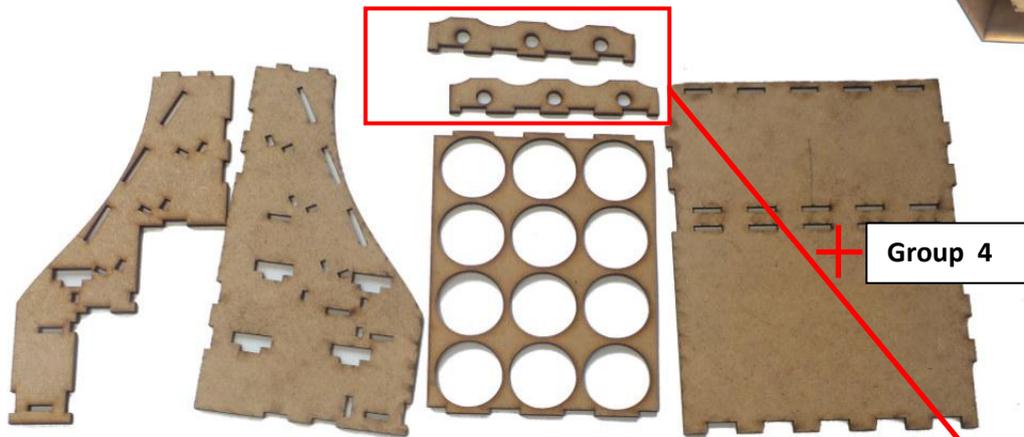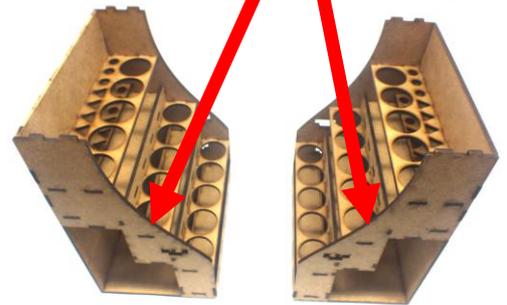

Group 1

Group 2

Group 3

LARGE:

See page 3 & 4 for different steps!

the pieces to be glued. Best to work in the indicated groups.

Work swiftly, so you can finish before the glue dries, so you can make adjustments.

1



1 Group 1: first glue two of the small strips together. Ensure right angles. Do this 3 times.

2



2 Group 2: first glue the small bottom into the slits of the two walls as shown. Then glue this into the slits of the large bottom plate.

3



3-4 Group 3: glue these 4 pieces together as shown. The narrow back plate needs to show up.

4



4 Group 4: glue the two brush holders and the larger plate into the slits of the back plate as shown.

5



5 glue the pieces from **group 3** and **group 1** into the slits of the side wall as shown.

6




6: glue in the paint holder into the angled slits

7



7 glue the pieces from **group 2** and **group 4** into the slits of the side wall as shown.

8

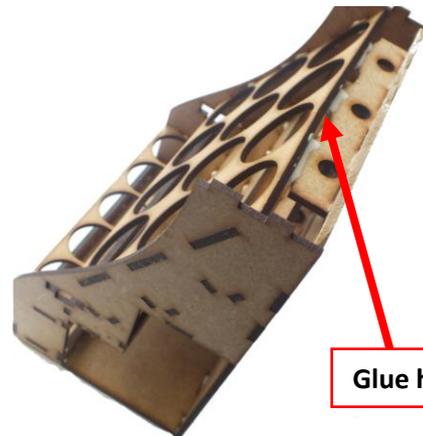

Glue here also

8 Now glue on the other sidewall. Best to work from top to bottom. Take your time, it can be a bit tedious. Also put glue on the top brush holder, where it touches the paint holder. **Ensure right angles!**

LARGE GW paint holder:

See below different steps!

Do steps 9 to 13 before step 5. Step 4 is not needed, as it is explained below.

9



Do these, even if you don't have a lamp

Do step 9-10 twice, but mirrored


10



9: glue 4 of the keyhole plates on top of each other. Ensure that, on the long side, they are alternating between 1 tab, then 2 tabs, then 1 tab, then 2 tabs again. **No glue inside the keyholes! The keyholes have to line up perfectly!**

10: Now glue this into the slots of the small plate. Very exactly, and fully inserted. Flat sides facing the way of the angled slot. **Do this twice, but mirrored.**

11

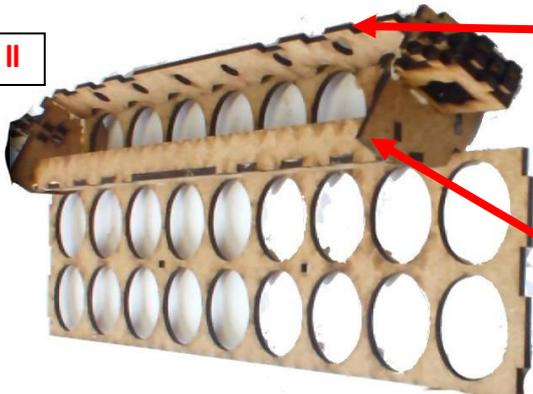

11: glue the **wide** brush holder and these 2 small groups into the slits in the paint holder at the narrow part together with the short one of the **Group 1** holders. Visible tabs facing to the back and outside. Very exactly, and fully inserted! This can be a bit tedious.




12



12: glue the unit from the previous steps into the slits of the back wall. Very exactly, and fully inserted! This can be a bit tedious. Also glue in the short piece with brush holes into the lower slits of the back wall.

13

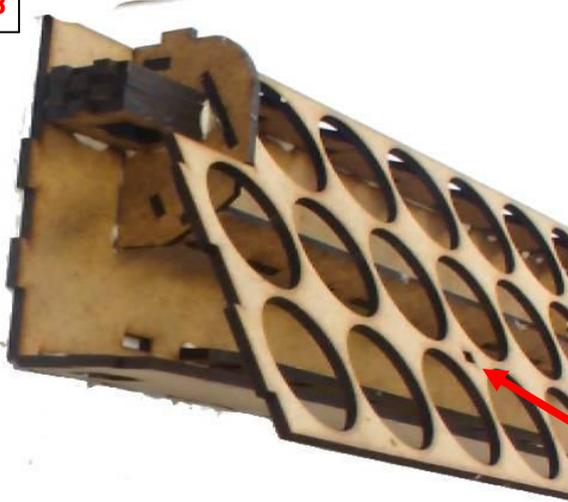


13: now glue on the plate with the keyholes at the bottom of the back wall, facing towards the paint holder.

Now continue as in Step 5 again.

Note: One of the pieces from group 1 has two noses on it. It needs to be approximately centered on the side plate and the noses facing forward. These noses have to be glued into the two little slits of the paint holder.



14

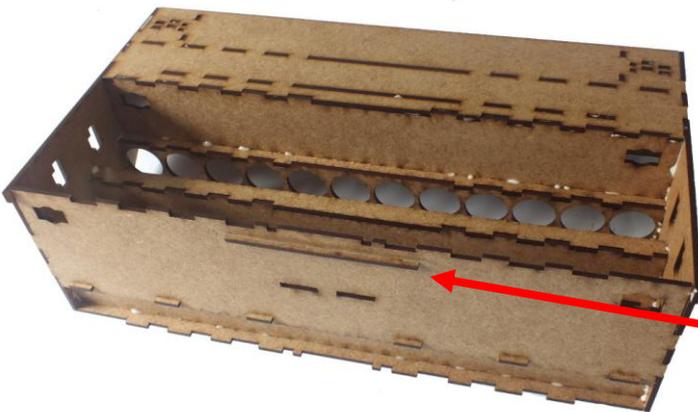

14: Now glue on the other sidewall. Best to work from top to bottom. Take your time, it can be a bit tedious.

Ensure right angles!

Insert fully into the slots on both sides!

Lastly, glue in the short strip with 3 tabs into the 3 slots at the bottom from below. Careful not to break it.

Don't let glue show anywhere. Use vice grips during glue drying time. Ensure right angles.

Tip: Insert into the bottom / middle plate during glue drying time so that everything fits together.