
Home Expansion - Large GW module

READ General Instructions FIRST!

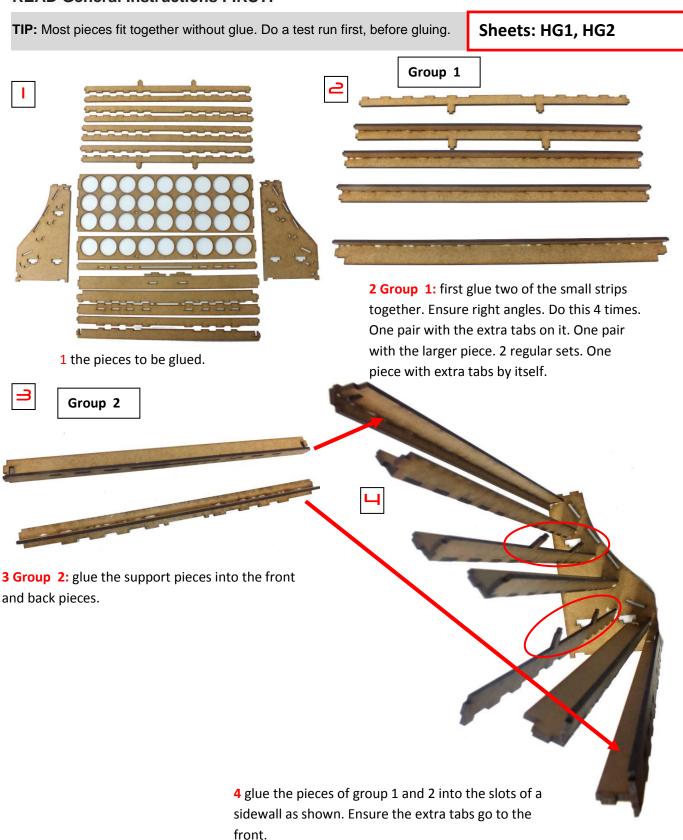




5: glue in the paint holders into the angled slits. Make sure the extra tabs go into the holes.



6 Now glue on the other sidewall. Best to work from top to bottom. Take your time, it can be a bit tedious. Also put glue on the top, where it touches the paint holder. **Ensure right angles!**

Insert fully into the slots on both sides!



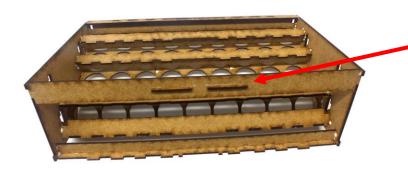

7: Lastly, glue in the back support piece at the bottom and the 2 short T-shaped strip at the bottom from below. Careful not to break it.