



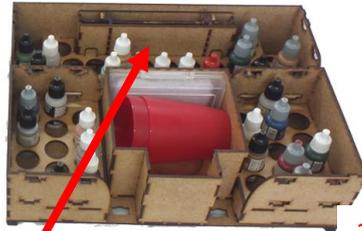

## Setup Small Station (GW & Dropper)

2

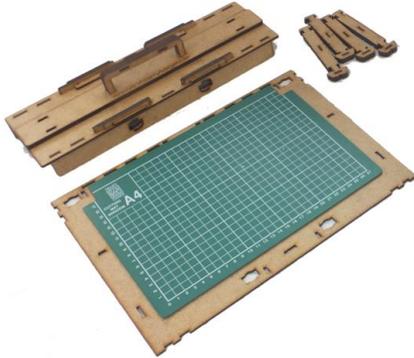

copyright 2015 - Work in Prog  
[www.WarMage.de](http://www.WarMage.de)

**1 closing:** Set brush holder in its spot. Set all 3 paint units into the slots of the bottom plate. Also set the tool box into its slots. Make sure nothing sticks out of the boxes; there is NO tolerance for this.



**2** set the upper plate onto the tabs of the paint holders and tool box. Make sure the tabs are all inserted. A bit of wiggling may be needed.

Slide the handgrip over the station straight from the front. The narrower overhang goes to the bottom, between the feet. It fits tightly. Let station slightly hang over edge of table to make this and turning keys easier.

Fully insert the 4 keys. Front keys have little indentations in the top. Turn keys 90 degrees to lock.

**DO NOT use force to turn keys. They should just drop in. A bit of wiggling may be needed to get them through all the layers. This gets easier with time.**

### 3 Setup:

Insert the tabs at the front of the large paint unit into the slots of the upper plate.

Insert the water pot holders into the slots left and right and attach the small paint holders the same way. Happy painting!



copyright 2015 - Work In Progress  
[www.WarMage.de](http://www.WarMage.de)

**Rise out and completely dry off sponge and wet palette before storing in the Paint Station.**

**Press sponge in between paper towels several times to get it fully dry.**

### CAUTION: Liquids

The material for the kits is MDF, which is made from wood.

Do not let any liquids soak into the material!

Always completely empty and dry off the water pots and wet palette before transport.

Ensure all paints are properly closed.

If the surface gets wet, wipe the liquid away quickly.


4



#### 4 Lamp Setup:

1. Insert the arm holder into the long arm, and turn it 90 degrees to lock it in place. You can do this at several height positions.
2. Then insert this arm into the holder in the large paint unit, and lock in place by turning it 90 degrees.
3. Slide the lamp holder over the short arm to the desired position.
4. Insert the short arm into the arm holder. Lock it in place with the little lock piece.
5. Clip the lamp onto the metal clips.

5

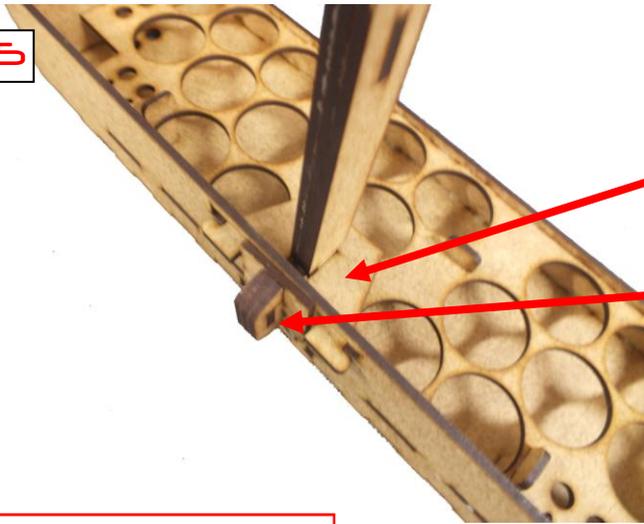

#### 5 Lamp Setup:

1. Slide the odd-shaped plate over the arm and lock it in place at the back wall and in the cutout of the arm.
2. Insert the little locking knob from the back and turn 90 degrees.
3. Slide the U-shaped piece over the locking knob at the back.
4. If you have the lamp box also, you can attach the lamp box to the back of the paint holder with the little locking knob, and don't need the U-shaped piece then.
5. Attach power cord to lamp. You may need a plug adapter for your country. Power cord can be on either side. Use plastic cap to protect lamp plug on the other side.

The lamp can move around a bit.  
This is normal. It is quite sturdy, but  
do not put weight on it.

6



#### 6 Lamp storage:

You can store the lamp and the arms in the large paint holder. They fit tightly and you lose some paint spots.  
Store the cable and all other pieces of the lamp in the tool box (cable inside water pot for Dropper version)