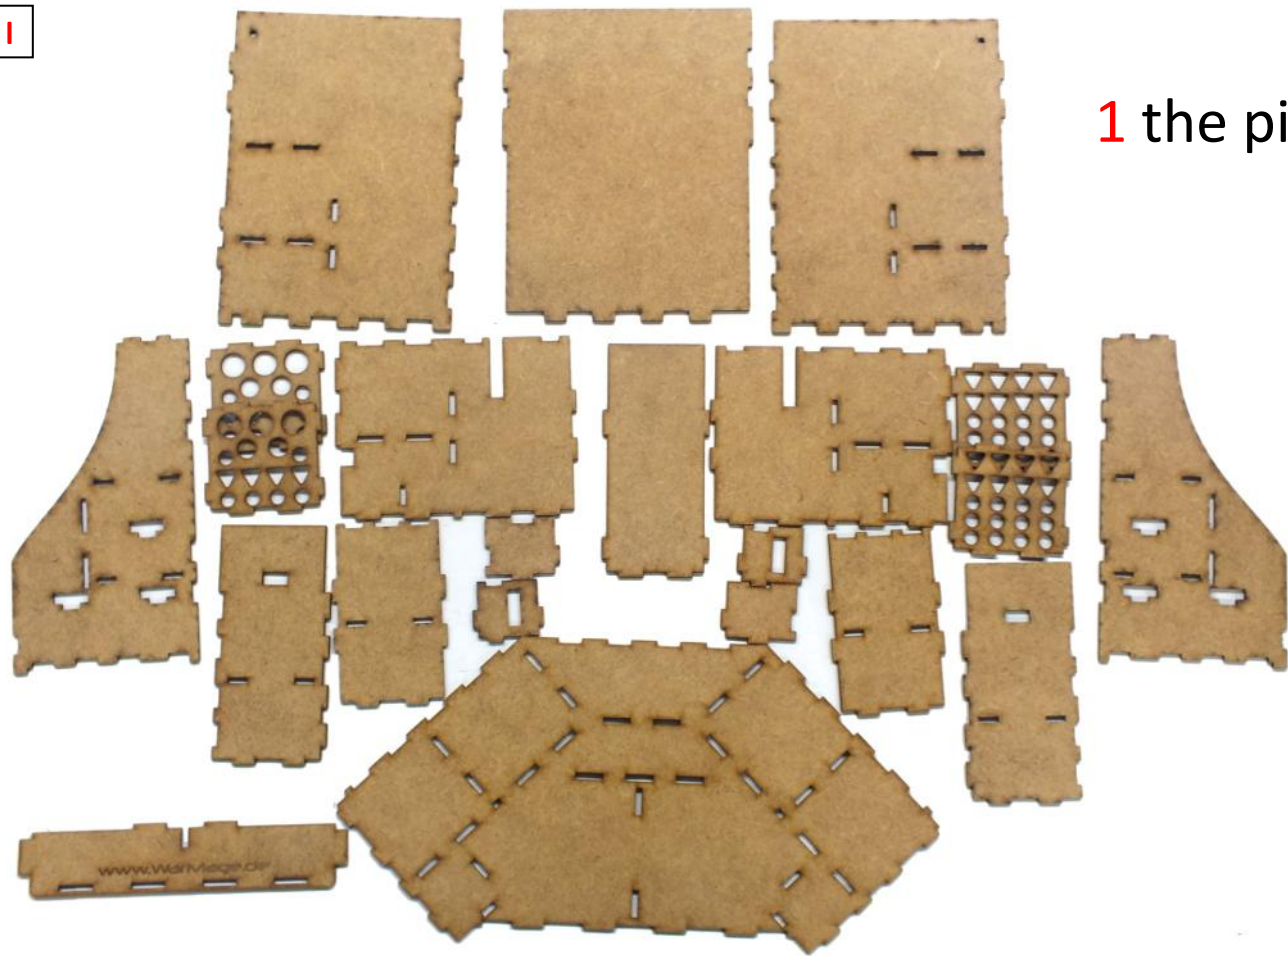# Home Expansion – Corner Water Pot Module
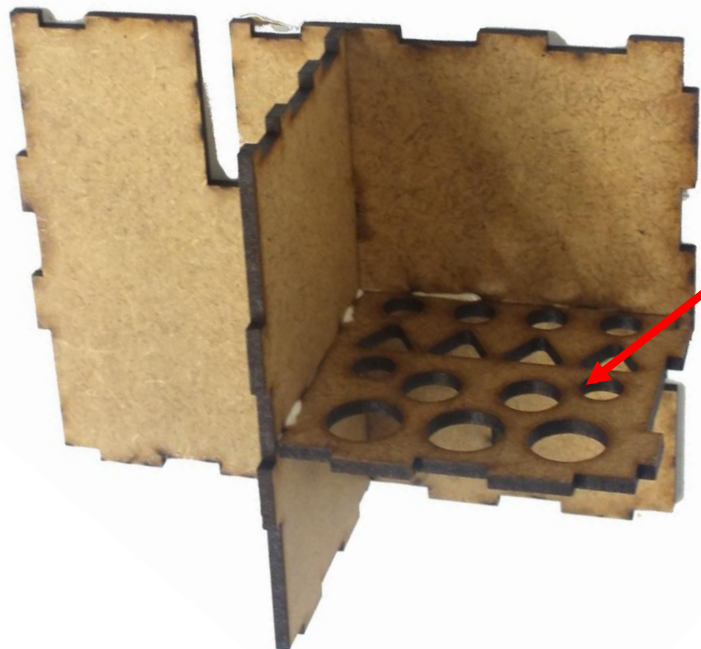
## READ General Instructions FIRST!

**TIP:** Most pieces fit together without glue. Do a test run first, before gluing. **This is a tricky kit, a bit of patience is needed during steps 4 to 9!**

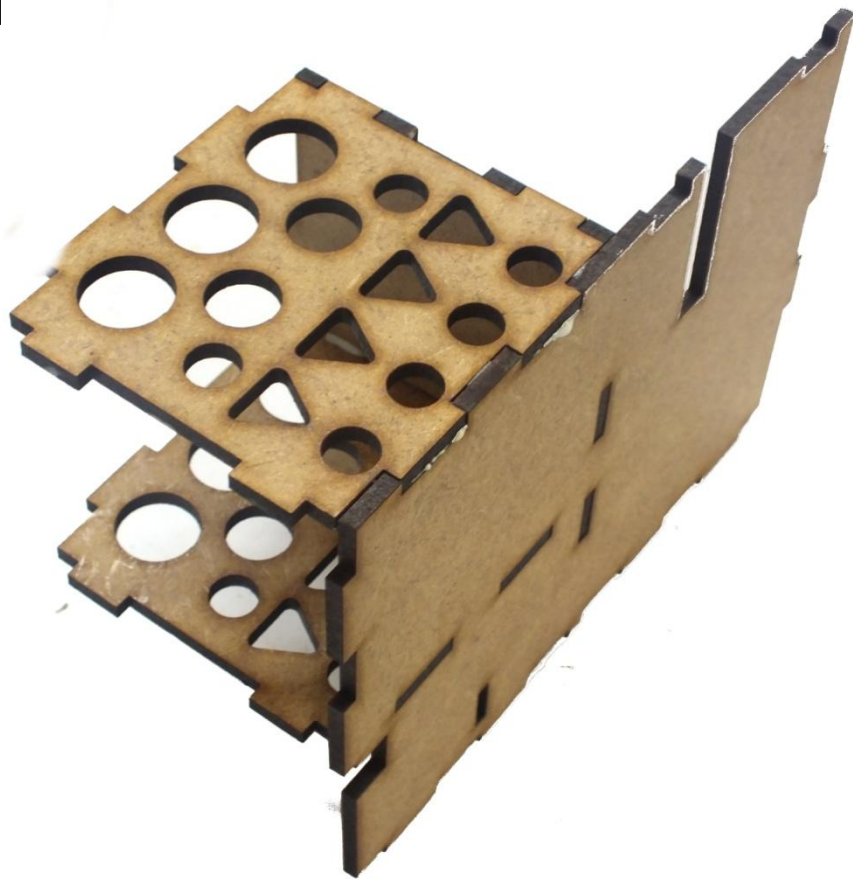**Sheets:**
**HCW-01 to HCW-04**
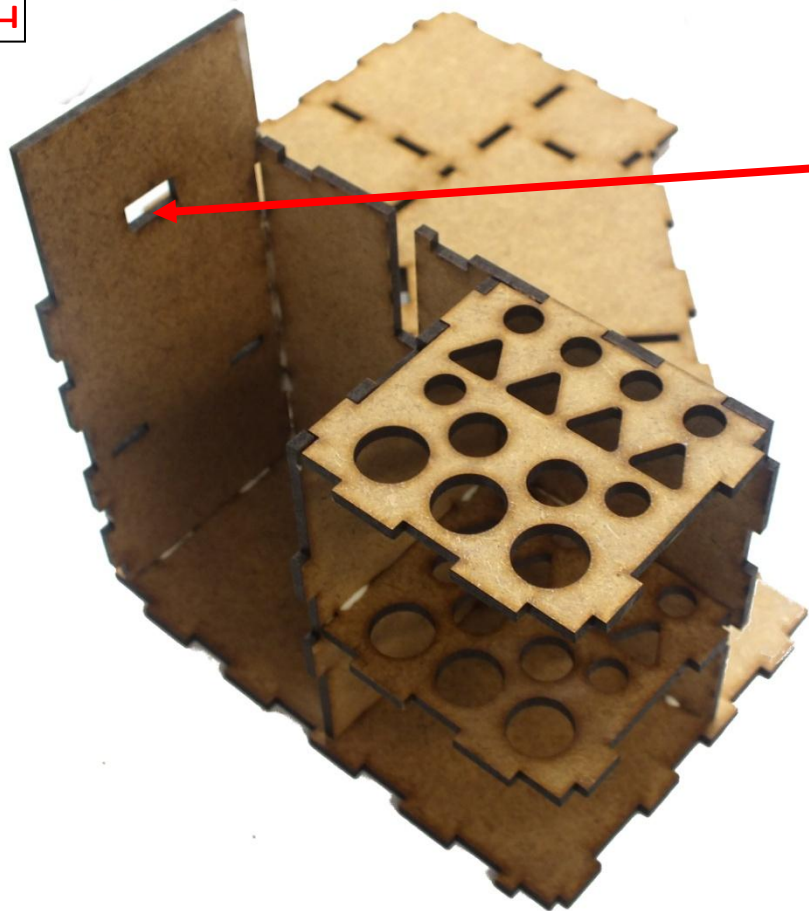
1 the pieces to be glued.

2 first glue in one brush holder into the middle wall and glue these 2 into the front wall, as in the picture.

Select here, which brush holder you want on the left or right side.

3 glue the second brush holder in at the top.
Same orientation as the other one.

4 then glue in the tall wall (hole towards the top) and glue the whole sub-assembly into the slits of the base plate, together with the 2 little front pieces in step 5.

5 little pieces: the one WITH hole towards the front!

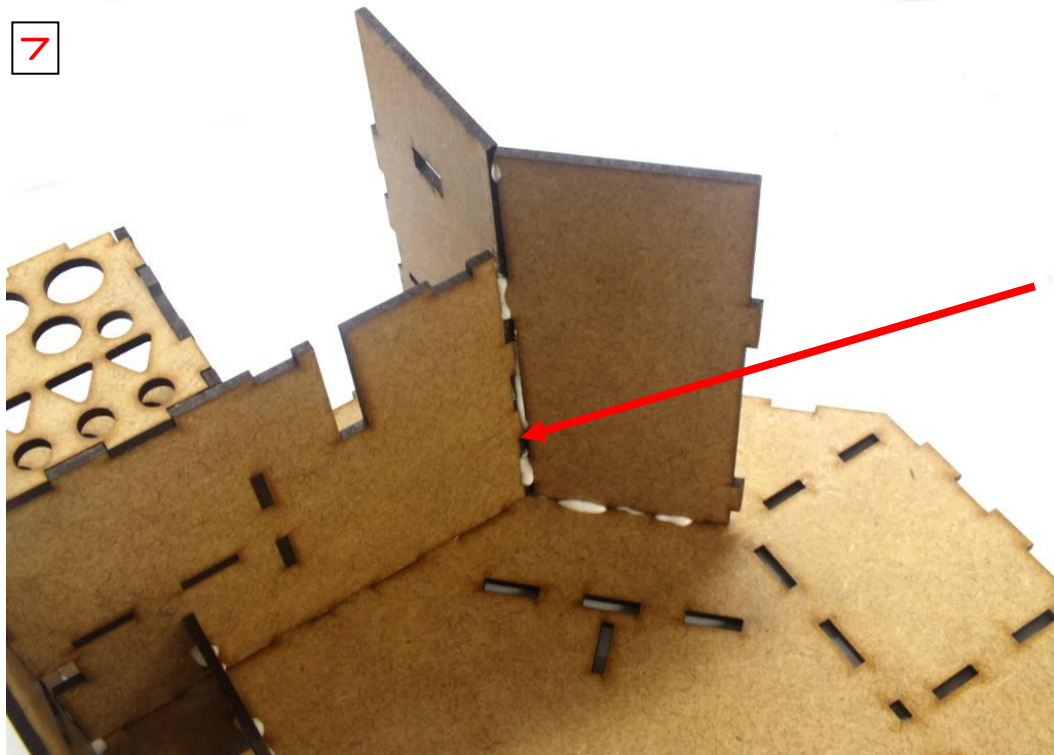These are a little tricky to glue in the slits all together.

6 Glue on the side wall, tabs all fully inserted.

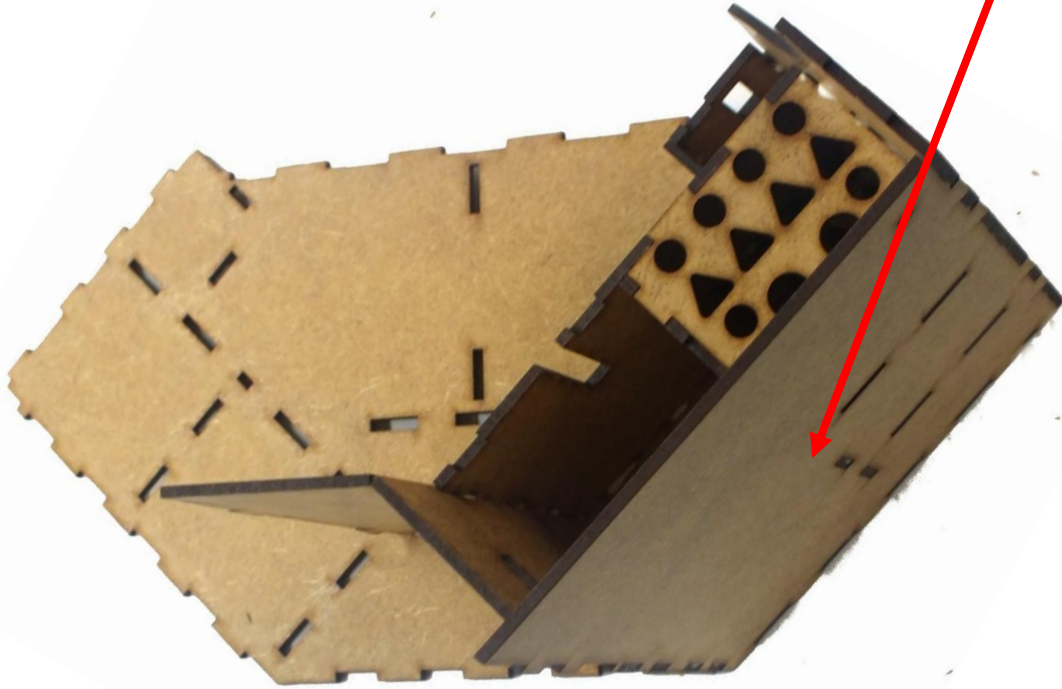7 glue in the center wall, ensuring it is fully inserted into the bottom slots and the tabs go into the corner cutouts. A bit tricky.
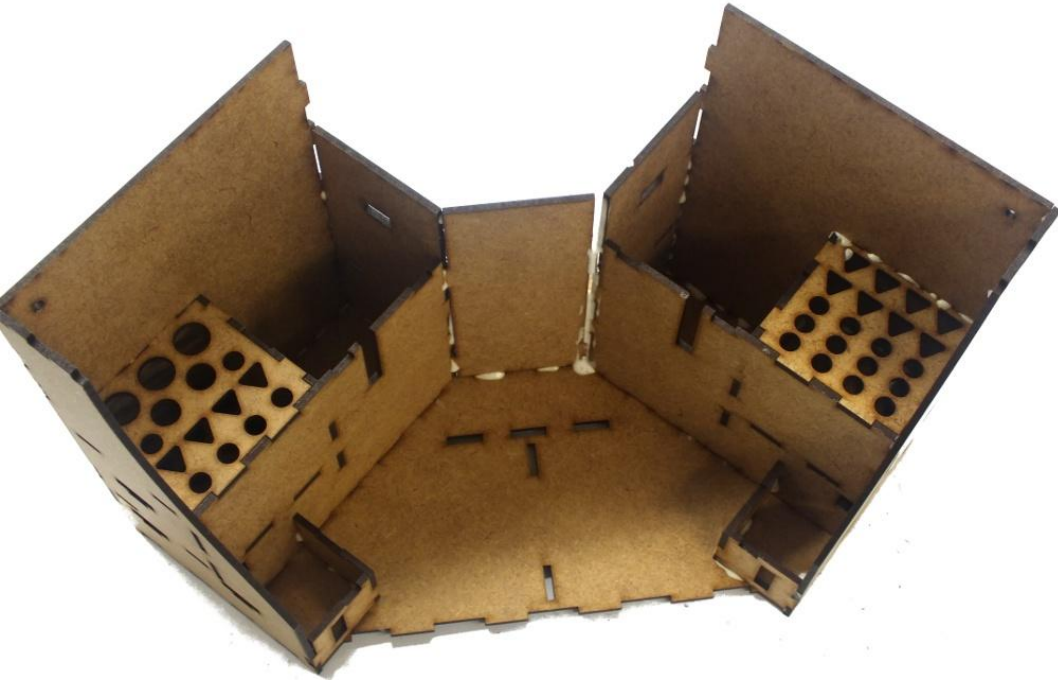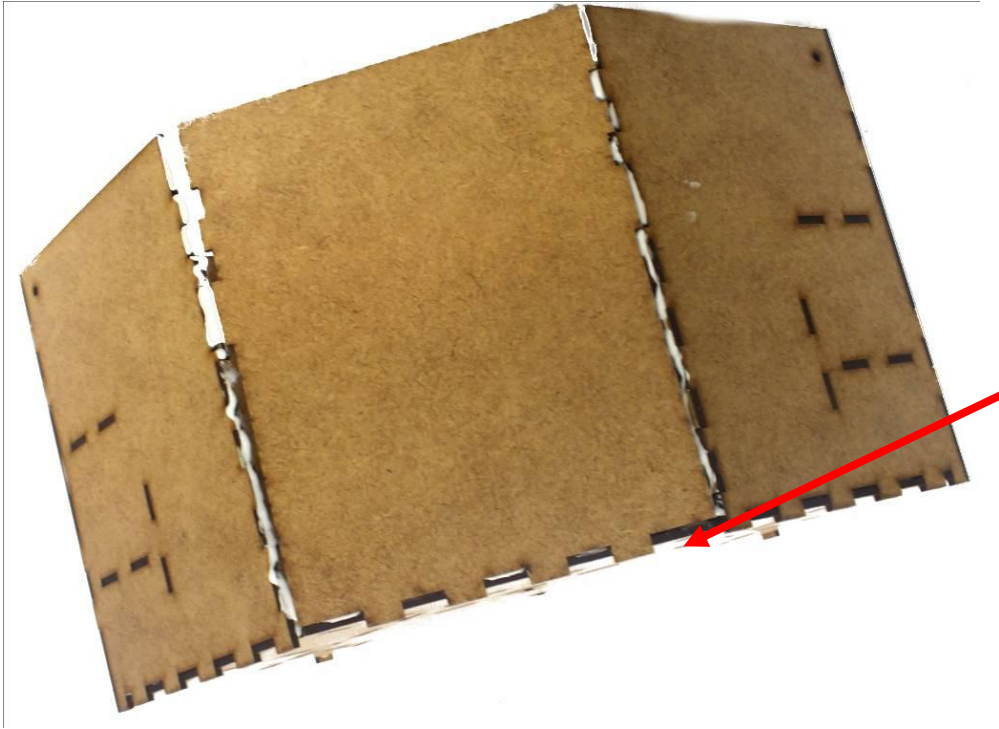
8 Glue on the back wall, tabs all fully inserted.

9 repeat steps 2 to 8 for the other side.

Getting the center wall to fit can be tricky.

Slightly angle / lift the other pieces to get it to fit, so that all tabs are fully inserted everywhere.
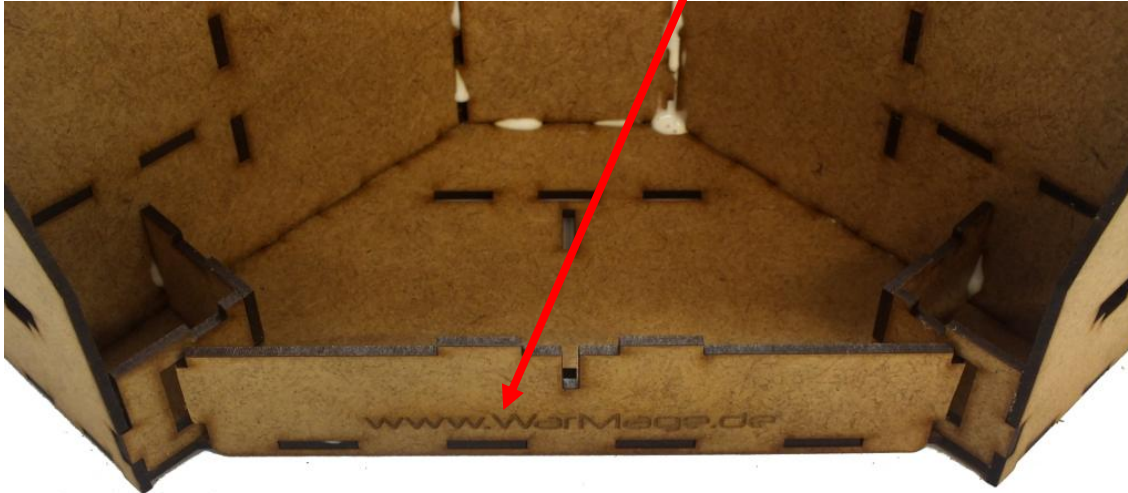
**10** Glue on the large back wall with plenty of glue between the angled pieces to ensure they hold properly and the gaps are closed.

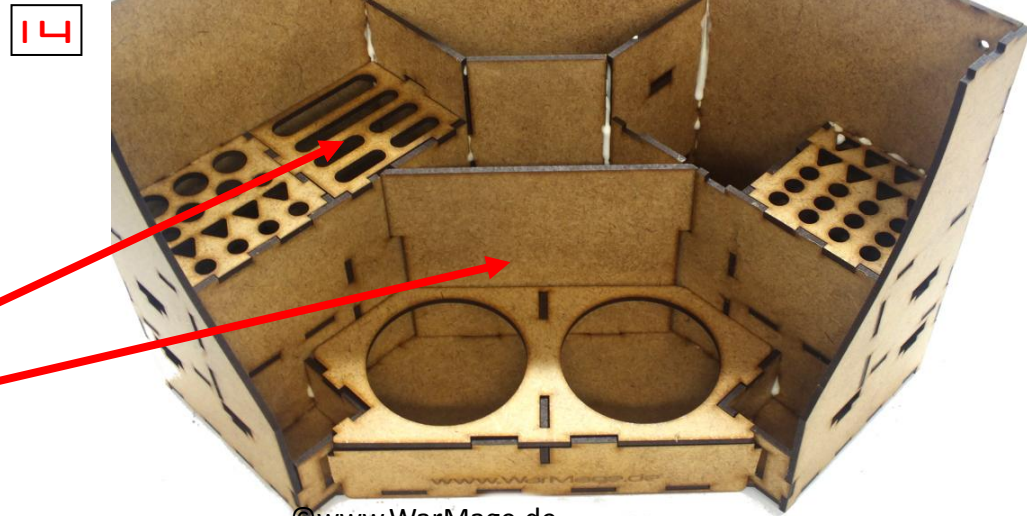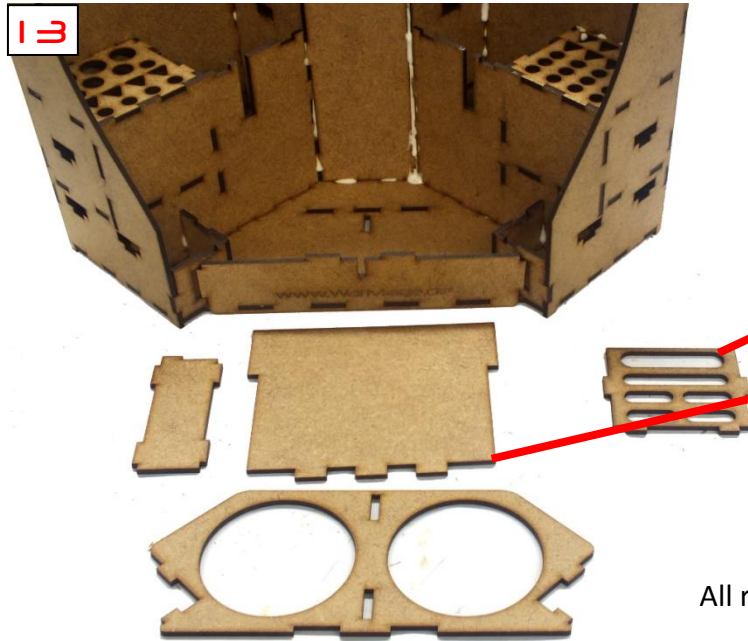All back walls have tabs that stick out at the bottom, this is correct.

Tip: During glue drying time use masking tape to ensure proper angles / fit of the large back plates.

12 Glue the front support strip (4 slits) onto the front of the base plate, and ensure that the whole module is straight.

**13-14** these pieces don't HAVE to be glued, but you can. Insert them in their spots as needed. The ruler holder can be on either side. Remove water pot holder if you don't have this module at table height, but stacked on top of others.