



Home Expansion - Corner Dropper paint holder


READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

Sheets:

HCD-01, HCD-02, HCD-03

1

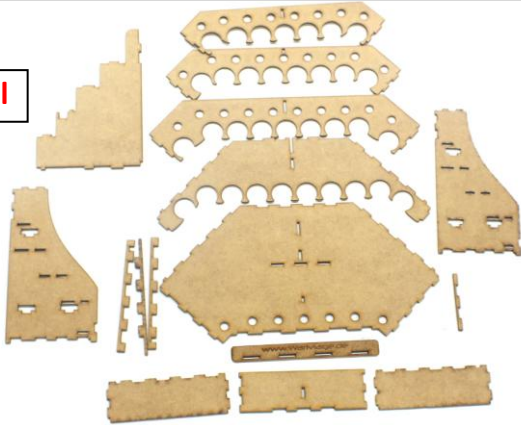

1 the pieces that need to be glued together.

2




2 first glue in the 4 paint holders into the tabs of middle strut (they only fit in the rights spot). Glue the middle strut into the base plate.

3




3 glue on the 2 side walls, tabs all the way in.

4

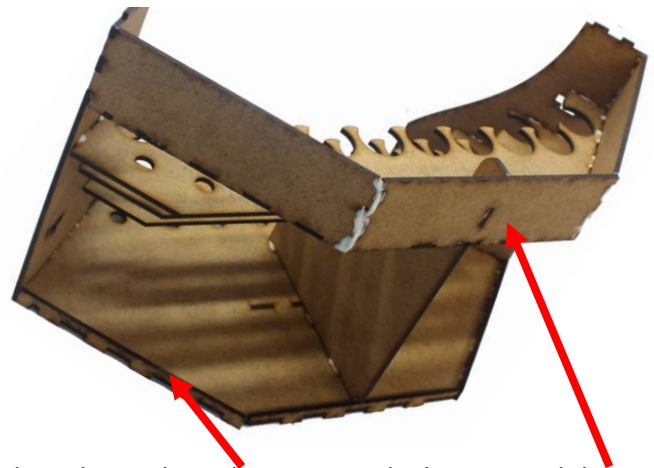

4 then glue in the 3 slim strips at the bottom and the 3 larger ones at the top. Make sure to put plenty of glue between the large ones to close the gap of the angles.

5

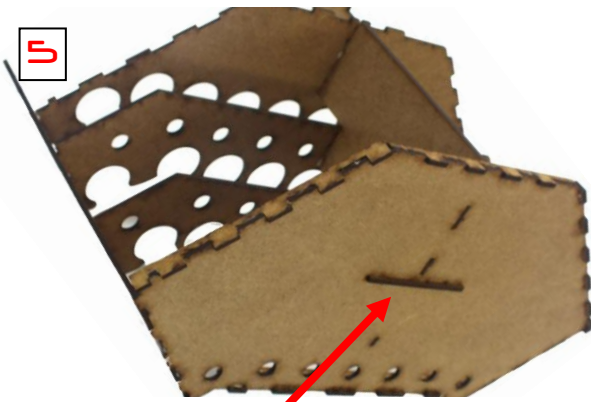

5 Glue in the slim strip with 3 tabs into the slots from the bottom. Careful not to break it. The strips from **4** stick out at the bottom. This is correct.

6



6 Glue the front support strip (4 slits) onto the front of the base plate, and ensure that the whole module is straight.

Tip: During glue drying time use masking tape to ensure proper angles / fit of the large back plates.