




## Home Expansion - Corner Dropper paint holder, stackable


READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

Sheets: HCDS1 to 4

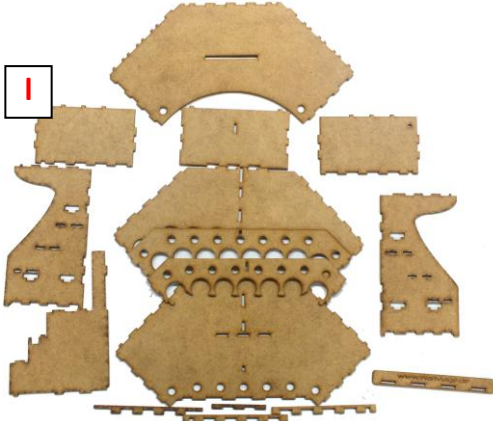

1 the pieces that need to be glued together.

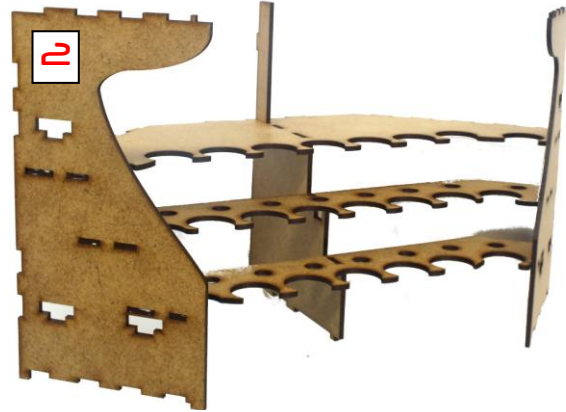


2 first glue in the 3 paint holders into the tabs of middle strut (they only fit in the right slits). Glue on the 2 side walls, tabs all the way in.




3 Glue this into the base plate.



4 then glue in the 3 slim strips at the bottom and the 3 larger ones at the top. Make sure to put plenty of glue between the large ones to close the gap of the angles.

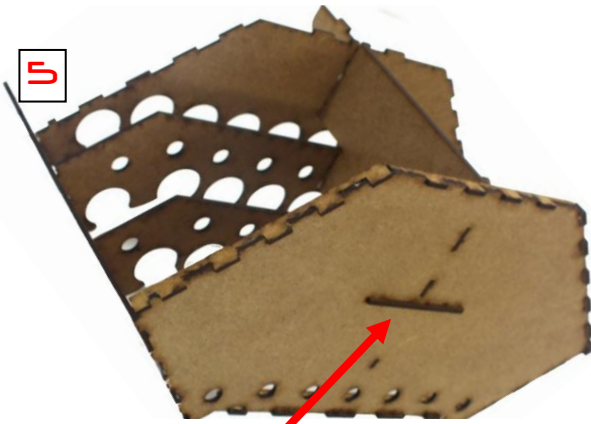

5 Glue in the slim strip with 3 tabs into the slots from the bottom. Careful not to break it. The strips from 4 stick out at the bottom. This is correct.

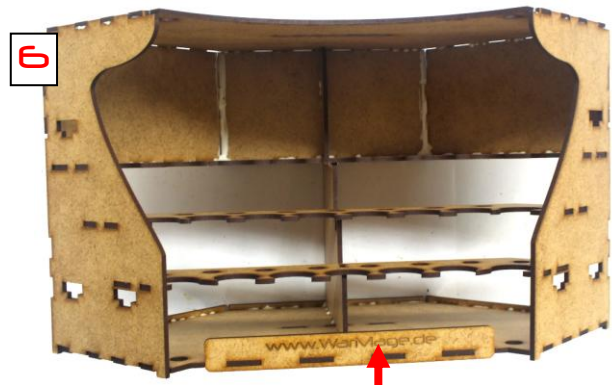

6 Glue the front support strip (4 slits) onto the front of the base plate and glue on the top plate. Ensure that the whole module is straight.

Tip: During glue drying time use masking tape to ensure proper angles / fit of the large back plates.