




## Home Expansion – 4 Spray Can & Drawers Module

**READ General Instructions FIRST!**

**TIP:** Most pieces fit together without glue. Do a test run first, before gluing.

**Sheets: HSD-1 to 5  
& single piece**

1

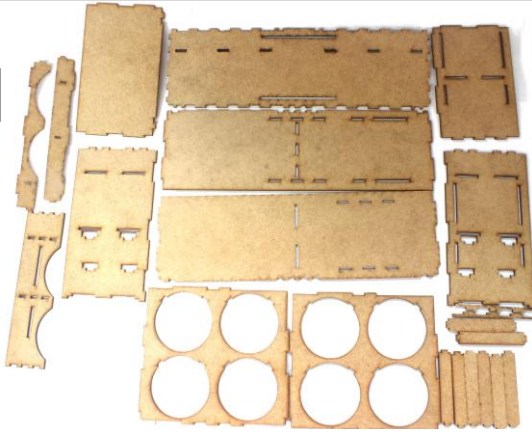

1 the pieces that need to be glued together.


2

**This unit can be assembled with spray cans on left or right side**




2 first glue in the 2 spray can holders into the slits of the middle wall.

3

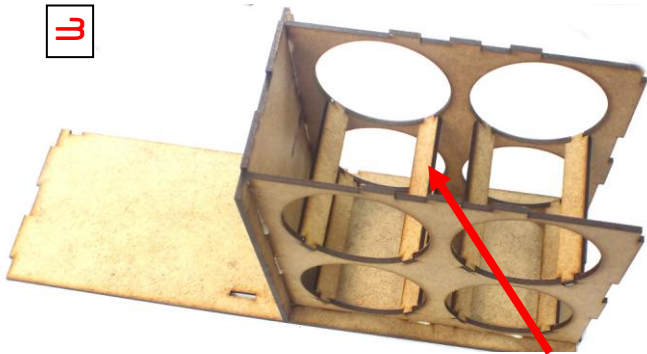


3 Glue this into the bottom plate. Glue in all the support strips into the cutouts of the spray can holders.

4

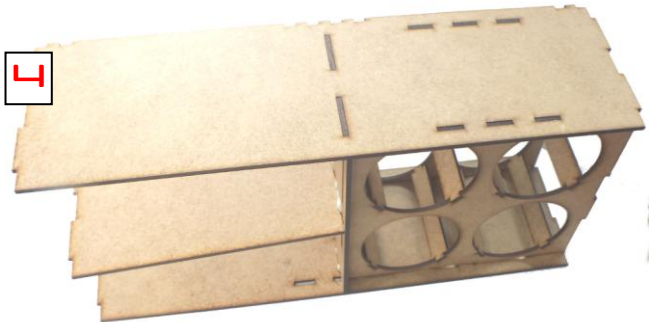

4 then glue the middle shelf and the upper shelf (tabs towards the back, where there are other tabs)

5

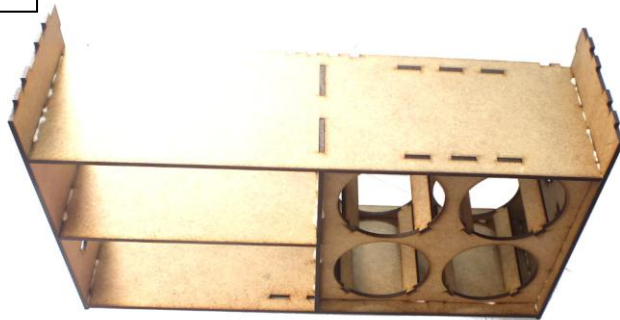

5 glue on the 2 sidewalls, tabs to the back.

6



6 glue on the upper plate, then the 3 support strips at the back, round cutouts where the spray cans are. Ensure right angles.


7



7 Also glue in the 2 small strips with the 3 tabs into the slits of the bottom from below

Tip: During glue drying use vice grips to ensure right angles / fit.


1

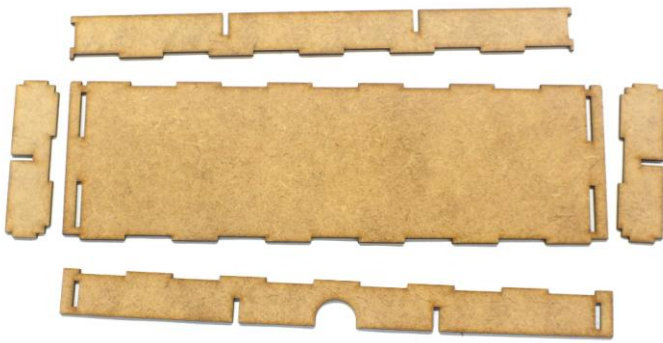

**3 Drawers:  
All assembled the same way, but  
different sizes.**


1 the pieces that need to be glued together.

2

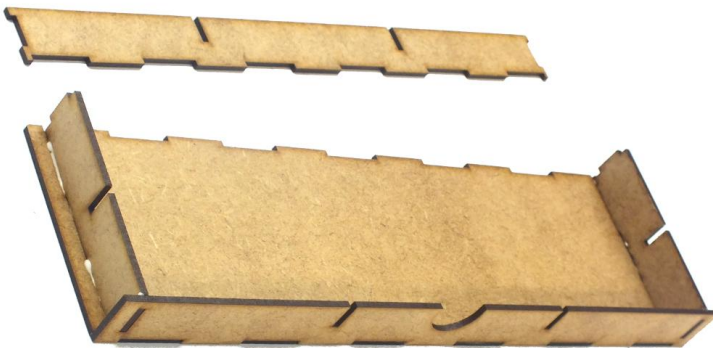

2 first glue in the 2 sidewalls into the slits of the bottom. Then glue in the front wall.

3

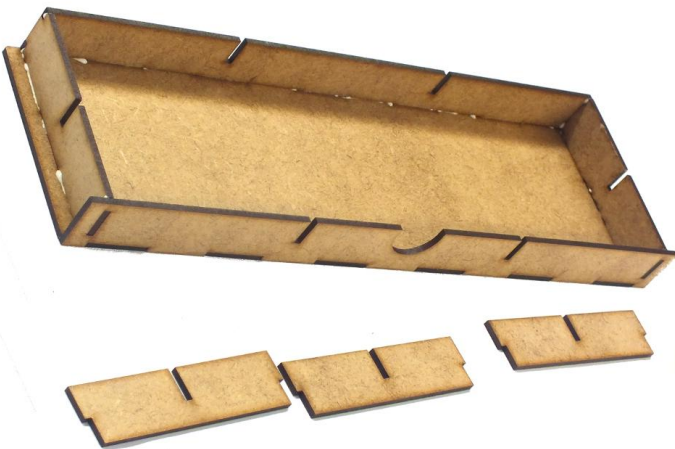

3 glue in the back wall. Ensure right angles.

The dividers can be inserted as needed without glue.