




## Home Expansion - large Dropper paint holder

**READ General Instructions FIRST!**


**Sheets: HD-01, HD-02  
& single piece**

**TIP:** Most pieces fit together without glue. Do a test run first, before gluing.

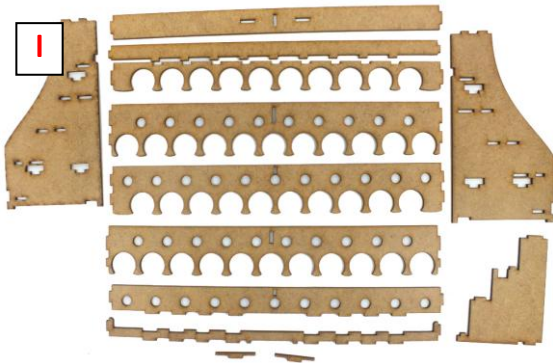

**1** the pieces that need to be glued together.

**2**

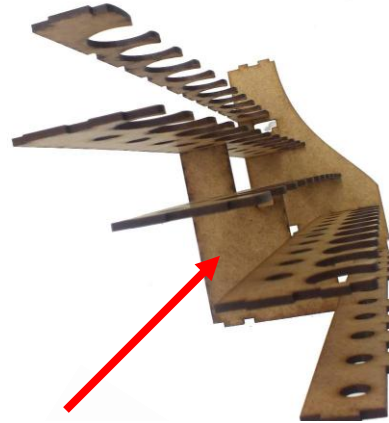


**2-3** first glue in the 5 paint holders into one sidewall. They all fit only in one spot.  
Also glue the middle strut into the slits of the paint holders.

**3**




**3** different view of 2

**4**

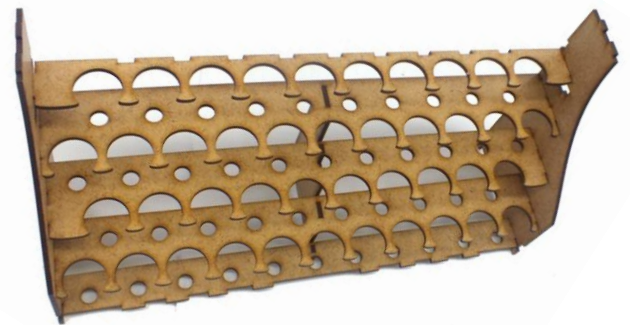


**4** then glue in the other sidewall.

**5**

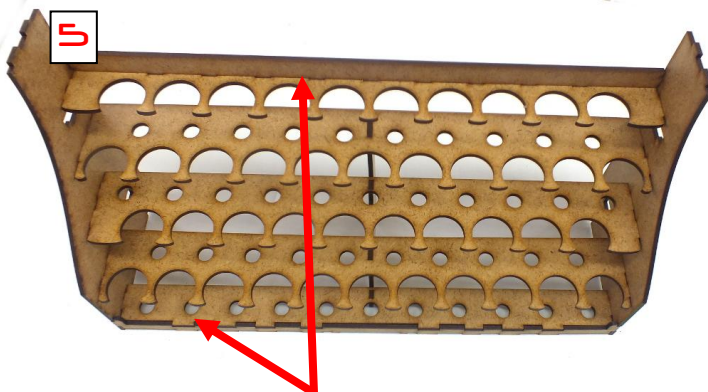

**5** glue in the support strips at the back and front.  
Ensure right angles

**6**

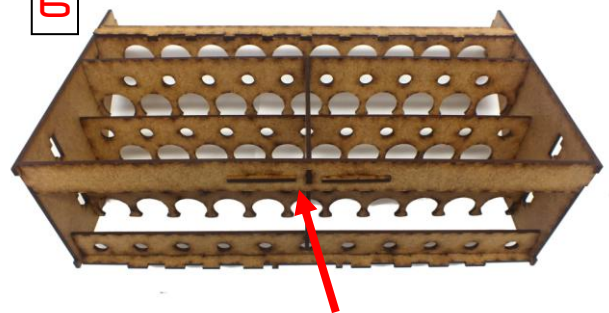

**6** Glue the back bottom strip in place, and ensure the middle strut is also glued into the slit.  
Glue in the 2 small T-shaped pieces into the slots from the bottom.

**Tip:** During glue drying use vice grips to ensure right angles / fit.