



Bottom plate

READ General Instructions FIRST!


TIP: Most pieces fit together without glue. Do a test run first, before gluing.

Sheets (always plus bottom plate with no number on it):

Large / Ultimate: UV-3

Small Dropper: SD-01, 03, 04


Small GW: SG-01, 05, 06

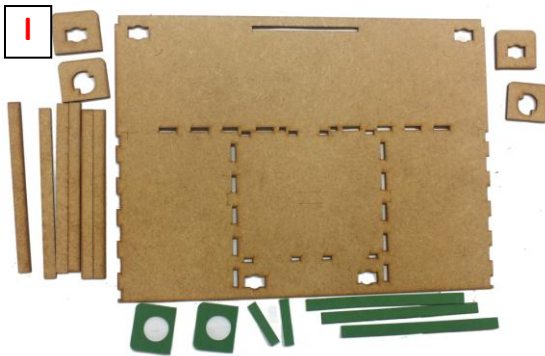

1 the pieces to be glued

For Ultimate version: take the plate with medium amount of slits in it, like in the picture!!!


Large / Small Version: the one with most slits

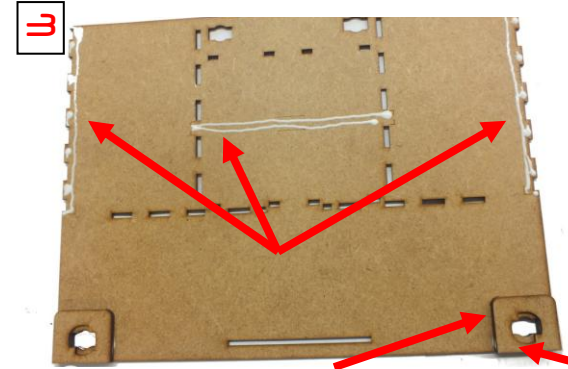

3 Then glue on the plates with larger holes, again very fitting on top of the other ones. It doesn't matter which way around.


Ensure the holes match perfectly and there is no glue in the holes!

Put glue on the bottom plate as in the picture. There are guide lines cut into the bottom plate.

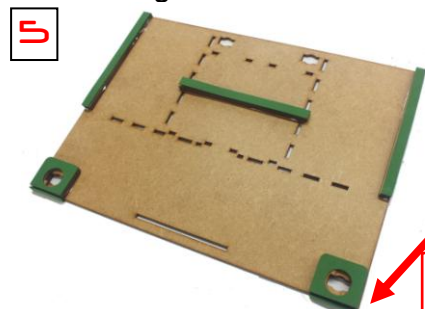


5 glue on the foam onto the glued on pieces. Also on the back of the keyhole plates.

Ensure the key holes match perfectly and there is no glue in the holes!

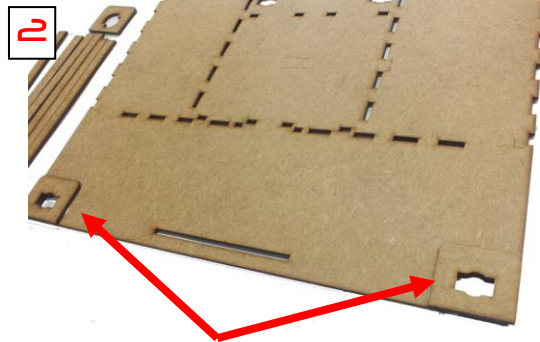

2 first glue in the plates with small keyholes fitting in the corners. There are guide lines cut into the bottom plate. Ensure the holes match perfectly and that there is no glue in them.

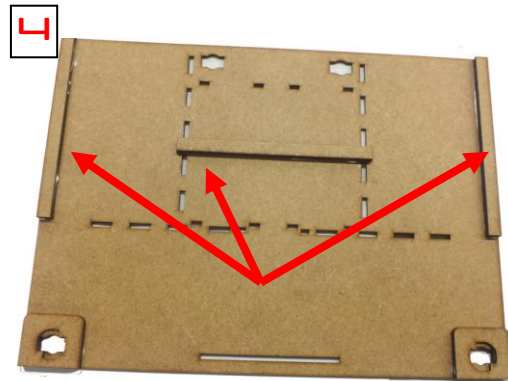

4 glue on 2 of the long strips on top of each other into the pre-marked spots.

Tip: put on around 20 KG of weight evenly during glue drying time.

There are also foam pieces to be glued to the back of the large paint holder. Make sure to place them so that the upper drawers can still fit on top.

