



large Dropper paint holder for Small Paint Station

READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

Sheets: SD-03,04,05

One side wall on each sheet: SD-06, SD-07


Steps 2 to 4 are only if you have the LED lamp.

Use sidewalls with two tabs on top.

(one on each sheet of the small paint holders)



1 the pieces that need to be glued together.

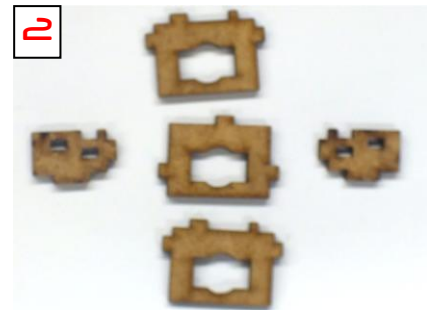

2 IF YOU HAVE THE LAMP ONLY: the pieces that need to be glued together for the lamp holder. They are on the sheet for the lamp.




3 IF YOU HAVE THE LAMP ONLY: glue 3 of the keyhole plates on top of each other. Ensure that, on the long side, they are alternating between 2 tabs, then 1 tab, then 2 tabs again. Now glue this into the slots of the small side plates. Very exactly, and fully inserted. Flat sides facing the same direction. **No glue inside the keyholes! The keyholes have to line up perfectly!**



4 IF YOU HAVE THE LAMP ONLY: Glue this into the slots of the back wall, visible tabs facing downwards.

5

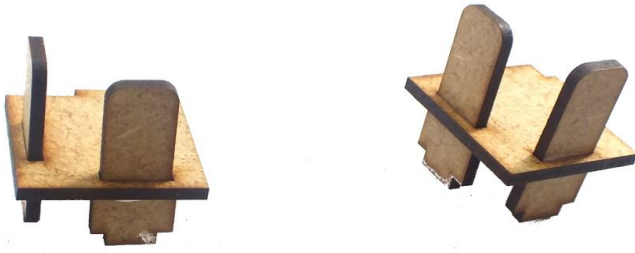

5 glue the rounded off pieces into the slits of the squarish plates, all the way. Ensure right angles.

6



6 then glue these into the back wall. Ensure right angles.

Also glue the front wall onto the paint holder.

7



7 then glue the paint holder into the back wall. Ensure right angles.


The brush holder can be stored here

8



8 Glue on the side walls and the bottom plate. Ensure the bottom tabs from the little holders (step 4 & 5) go into the slits of the bottom plate.

9

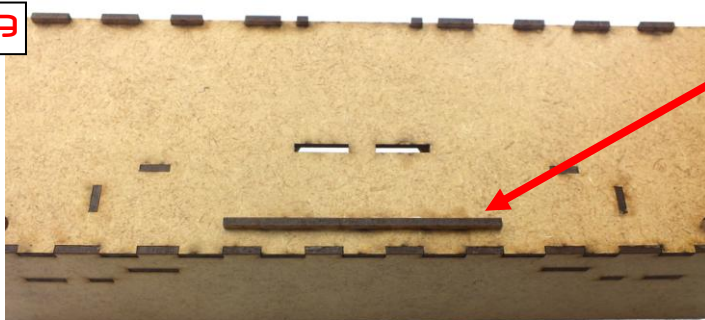

9 Lastly, glue in the short strip with 3 tabs into the 3 slots at the bottom from below. Careful not to break it.

Tip: During glue drying use vice grips and insert the paint holders into the bottom plate to ensure right angles / fit.

Don't let glue show anywhere.