




middle tool box

Sheets:
LK2, LK3


READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

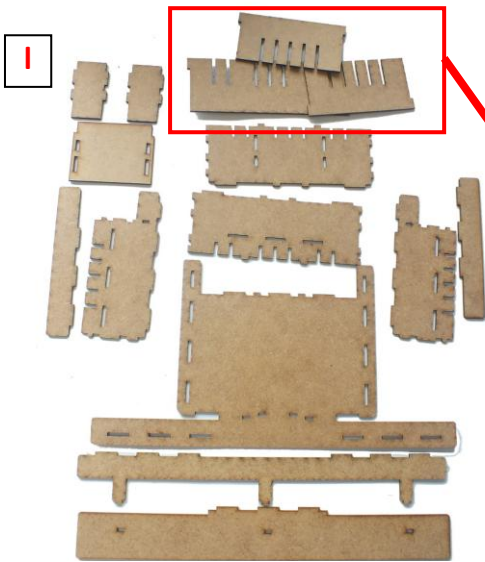

1 the pieces to be glued.


2

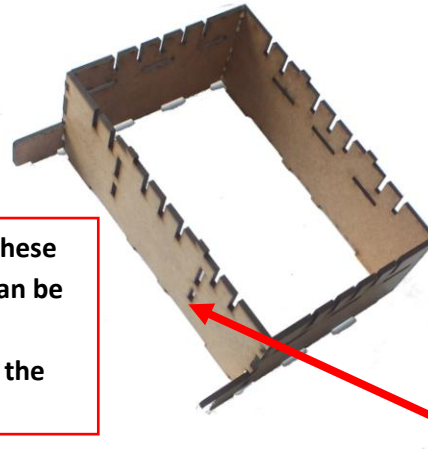

Don't glue in these pieces. They can be readjusted as needed inside the box.


2 glue together the side, front and back walls. The front wall with the upright slits towards the side with the little „wings“.

3

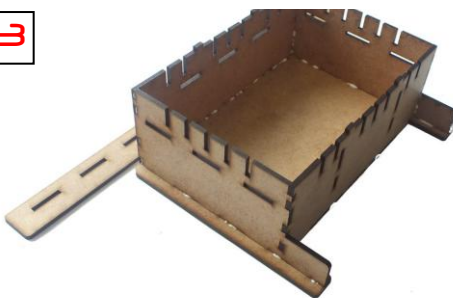


3 then glue this into the bottom plate. All the way into the slits, no gap!

4

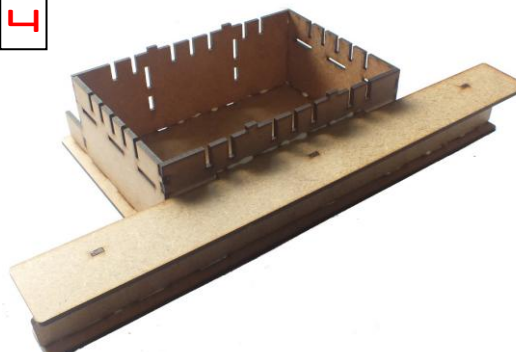

4 glue the support piece onto the large back wing, then the long upper wing into the back wall and the support piece.

5

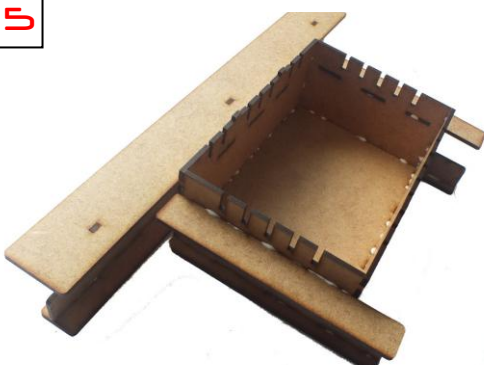

5 glue on the two little wings into the slots of the side walls, facing the same way as on the bottom. Ensure right angles!

6



6 glue in the 2 little pieces into the upright slits of the front wall, and the last piece onto these. **Ensure right angles!**