




Small GW drawers

READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

Small: two times GDS1

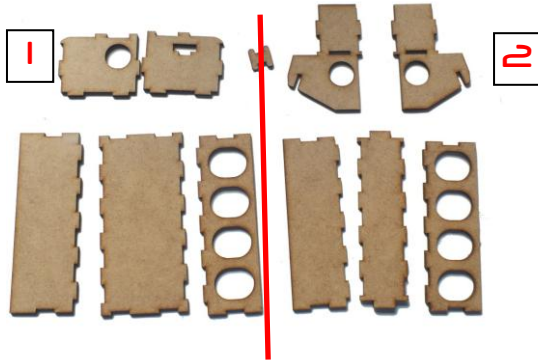


1 the pieces to be glued.

Upper and lower drawers. The lower drawer has the slightly longer pieces, in the picture on the left side.

2 lower drawer: If you want to store paints in there, cut out the holes in the front first. For tools, leave them closed, so things can't fall out.

Glue together from bottom, 2 sides, back and front walls. **There are left and right side drawers. Ensure that the round finger holes are on one drawer facing left, and on the other one facing right.**

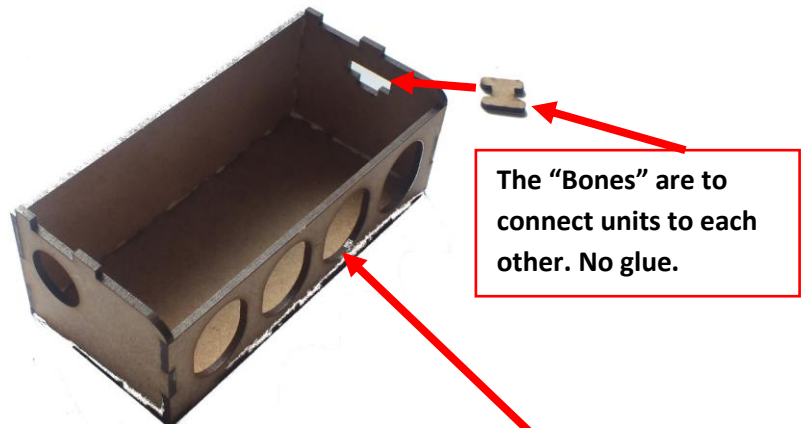

3 upper drawer: first glue on the front wall on the bottom plate and glue on the back wall.

Ensure right angles.



4 glue on the side pieces. They only fit in one way. On each side, one tab sticks out. This is correct.

Tip: Insert upper drawer into the lower one during glue drying time so that everything fits together. They are fitting snugly.

If you want to store paints in the drawers, cut out the holes in the front first.
For tools, leave them closed, so things can't fall out.