



## small / large low dropper paint holders for Ultimate version

READ General Instructions FIRST!

**Sheets: UDS1 & UDS2**  
**One on each sheet**

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

**Sidewalls with one tab on top**

1



1 the pieces that need to be glued together.

Assemble twice the same way

2



2 first glue in the 2 paint holders. Carefully, they can break easily if you apply too much pressure.

3



3 then glue in the sidewalls.

4



4 glue in the back and front walls. Ensure right angles

**Don't let glue come out anywhere.**

5



5 the front and back walls stick out on the bottom, which is correct.

Tip: During glue drying use vice grips and insert the paint holders into the bottom plate to ensure right angles / fit.

**Remaining parts of UDS1 & UDS2 are for middle / upper plate.**


**Additional steps for the large low dropper holder**      **Sheets: UDA1 & UDA2**

6



6 For the large paint holder, during step 3 glue in the 2 keyhole plates fitting into the inside corners. The little tabs go into the side & back walls. Make sure there is no glue in the key holes and that they are exactly matching!

7

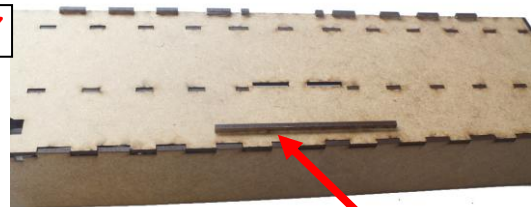

7 For the large paint holder, glue the small strip with 3 tabs into the 3 slits from below. Careful not to break it.

**Remaining parts of UDA2 are for small storage box – Ultimate & connectors**