



Small Dropper drawers

READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

Small: two times DDS1


1



1 the pieces to be glued.

Upper and lower drawers. The lower drawer has the slightly longer pieces, in the picture on the left side.

2

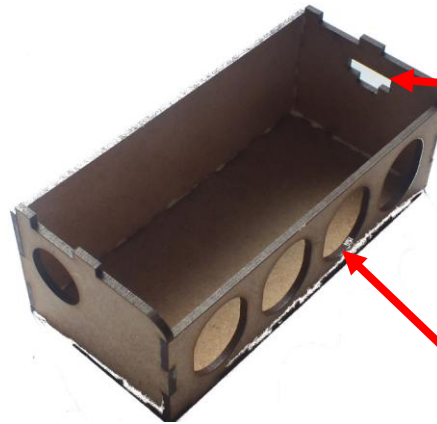

The "Bones" are to connect units to each other. No glue.

2 lower drawer: If you want to store paints in there, cut out the holes in the front first. For tools, leave them closed, so things can't fall out.

Glue together from bottom, 2 sides, back and front walls. There are left and right side drawers. Ensure that the round finger holes are on one drawer facing left, and on the other one facing right.

3



3 upper drawer: first glue on the front wall (with elongated slit into the slits of the paint holder).

4



4 then glue on the bottom plate to the front wall. Ensure right angles.

5



5 glue on the side pieces. They only fit in one way. On each side, one tab sticks out. This is correct.

6



6 Glue on the back wall and the narrow strip at the bottom of the back.

Tip: Insert upper drawer into the lower one during glue drying time so that everything fits together. They are fitting snugly.