




upper tool box


READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

Sheets: LK4, LK5

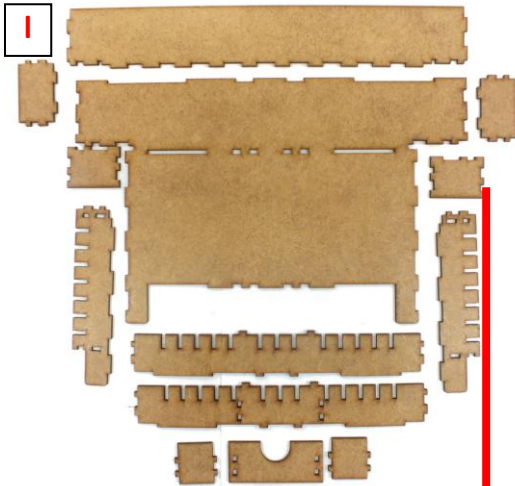


1 the pieces to be glued.

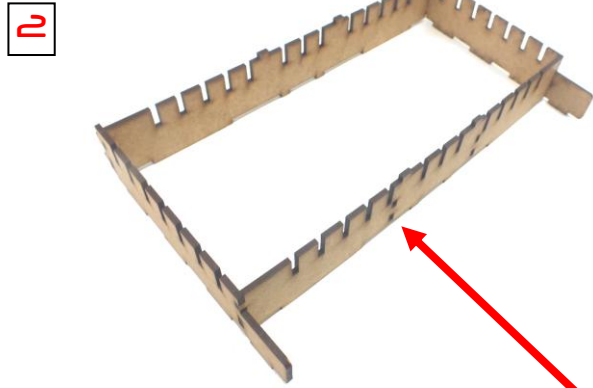


2 glue together the side, front and back walls. The front wall with the upright slits towards the side with the little „wings“.




3 then glue this into the bottom plate together with the two pieces at the back. All the way into the slits, no gap!

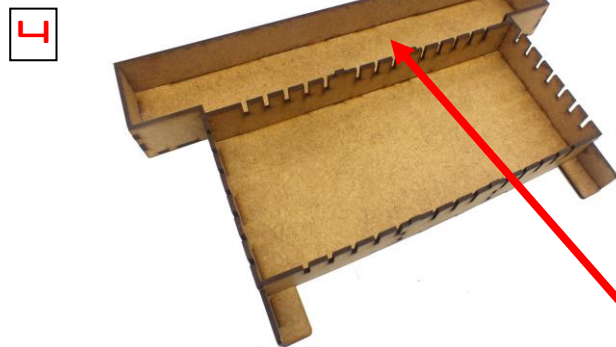

4 glue the side walls and back wall onto the wide part. This part is where the lamp & holders can be stored.

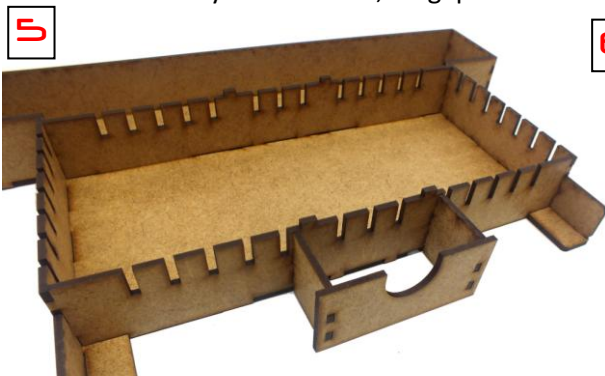

5 glue in the 2 little pieces into the upright slits of the front wall, and the last piece onto these, with round cutout to the top. **Ensure right angles!**

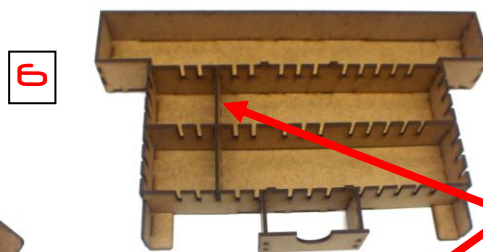

Don't glue in these pieces. They can be readjusted as needed inside the box.

