

# Bottom plate

**READ General Instructions FIRST!**

**TIP:** Most pieces fit together without glue. Do a test run first, before gluing.


**Sheets (always plus bottom plate with no number on it):**

**Large / Ultimate: UV-3**

**Small Dropper: SD-01, 03, 04**

**Small GW: SG-01, 05, 06**

1

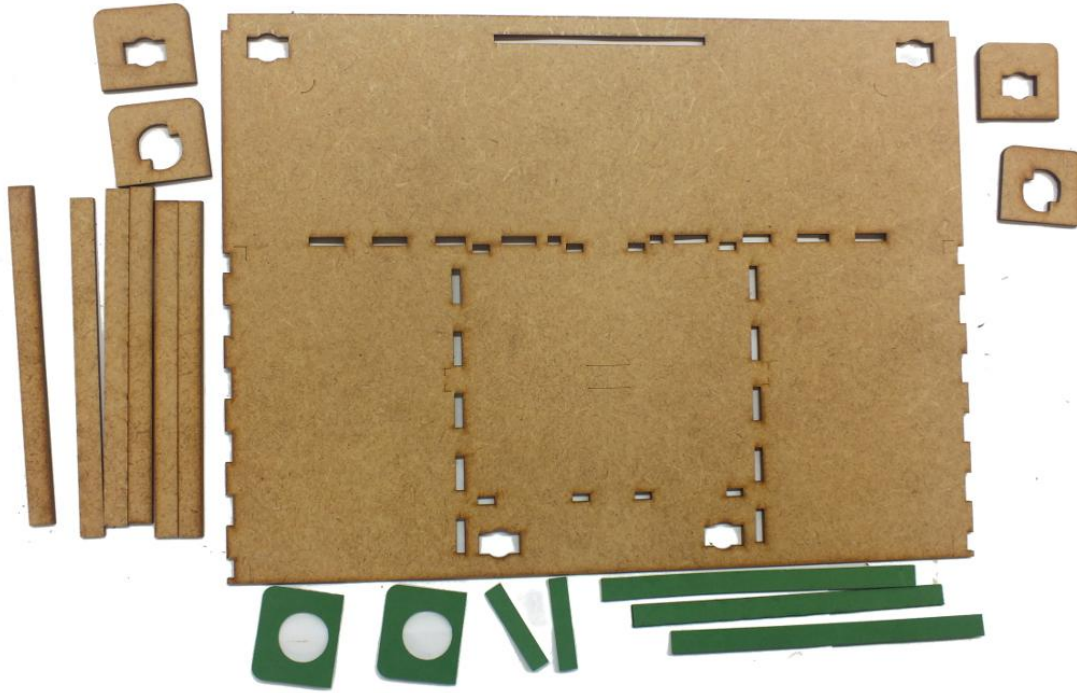


1 the pieces to be glued

**For Ultimate version:  
take the plate with  
medium amount of slits  
in it, like in the  
picture!!!**

**Large / Small Version:  
the one with most slits**


2

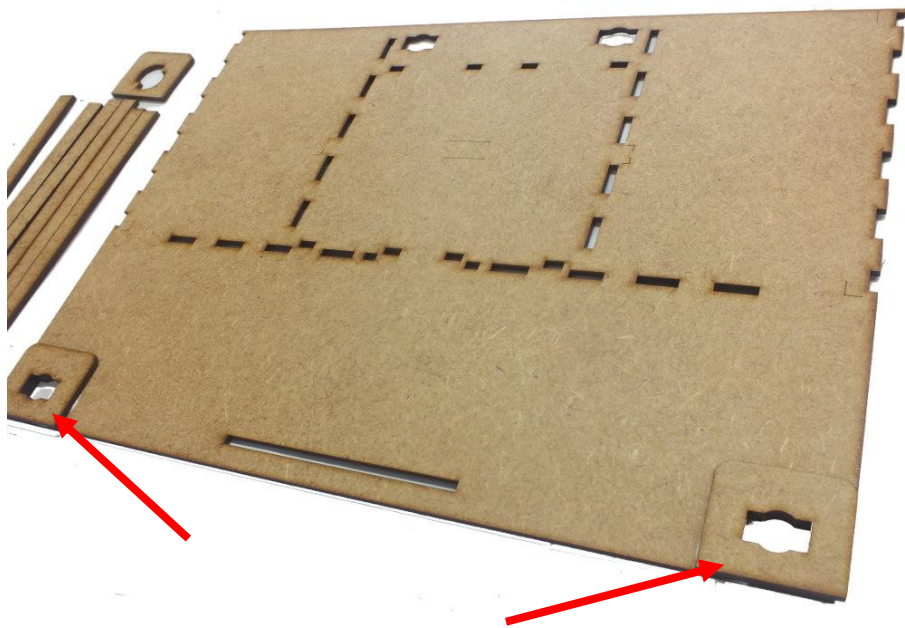

2 first glue in the plates with small keyholes fitting in the corners. **There are guide lines cut into the bottom plate.**


**Ensure the holes match perfectly and that there is no glue in them.**

3

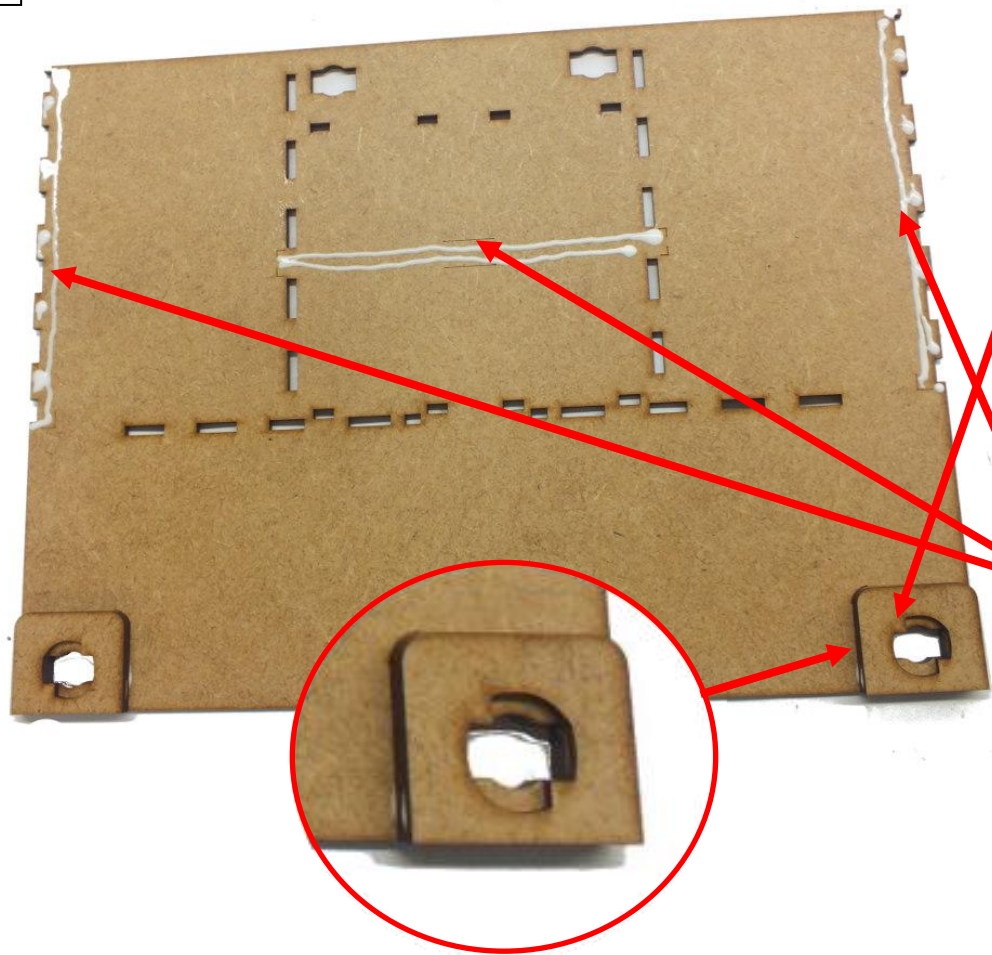


3 Then glue on the plates with larger holes, again **very fitting on top of the other ones.** It doesn't matter which way around. **Ensure the holes match perfectly and there is no glue in the holes!** Put glue on the bottom plate as in the picture. **There are guide lines cut into the bottom plate.**

4

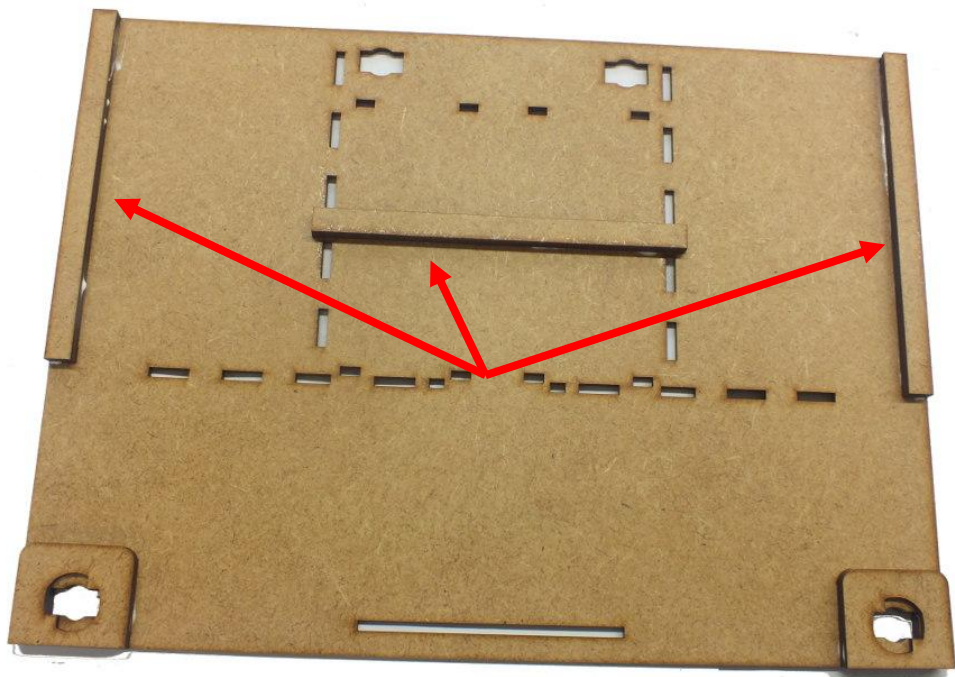

4 glue on 2 of the long strips **on top of each other** into the pre-marked spots.

5

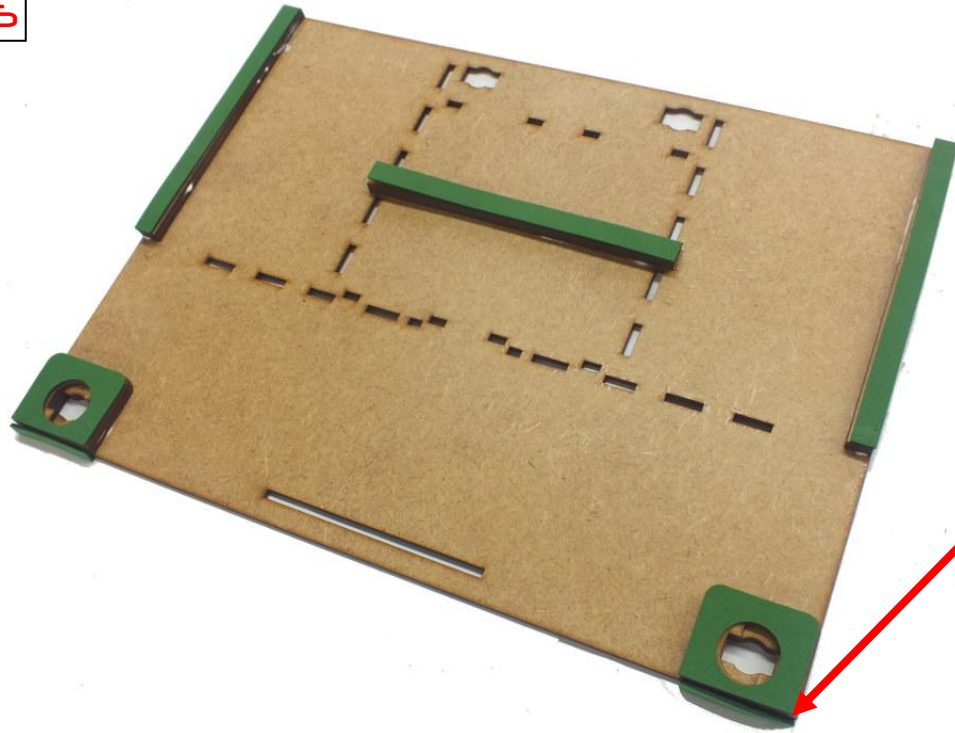

5 glue on the foam onto the glued on pieces. Also on the back of the keyhole plates.

**Tip: put on around 20 KG of weight evenly during glue drying time.**

**Ensure the key holes match perfectly and there is no glue in the holes!**



There are also foam pieces to be glued to the back of the large paint holder. Make sure to place them so that the upper drawers can still fit on top.