

Home Expansion – Corner Dropper paint holder


READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

Sheets:


HCD-01, HCD-02, HCD-03

I

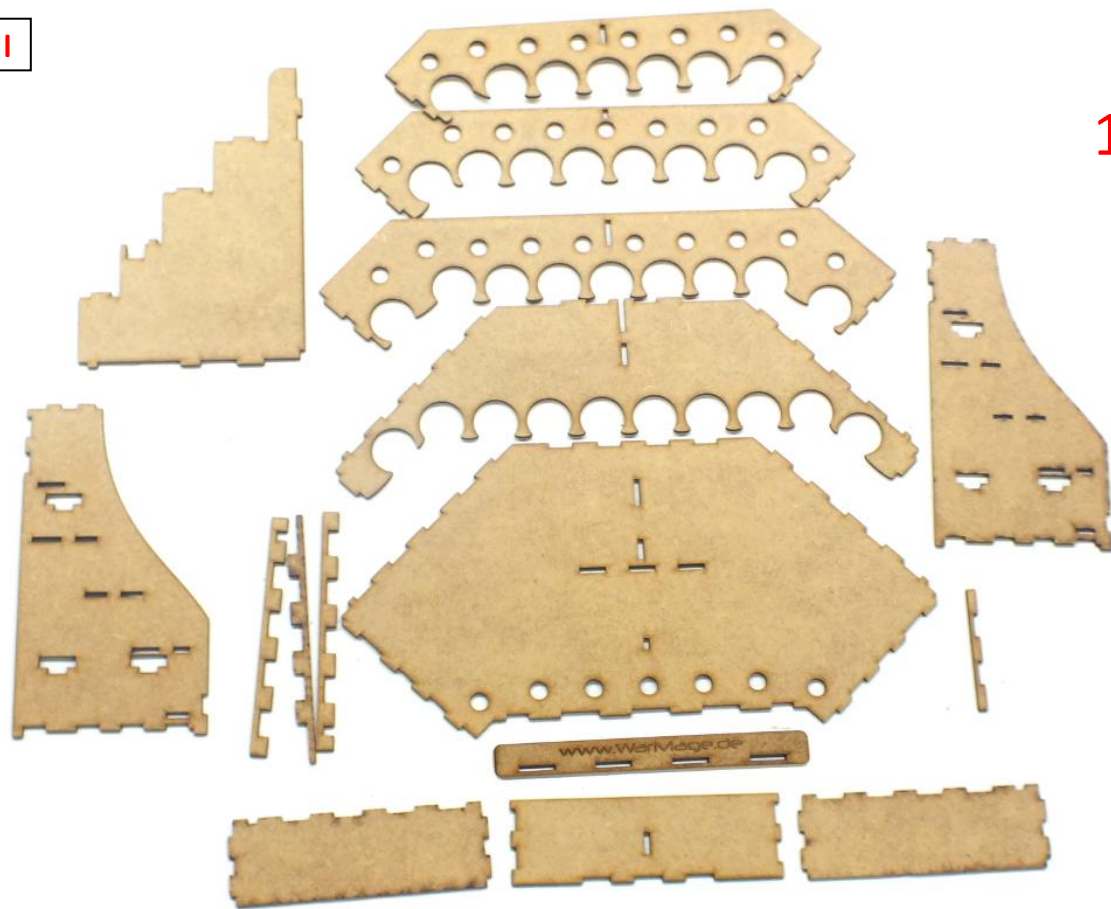

1 the pieces to be glued.

2

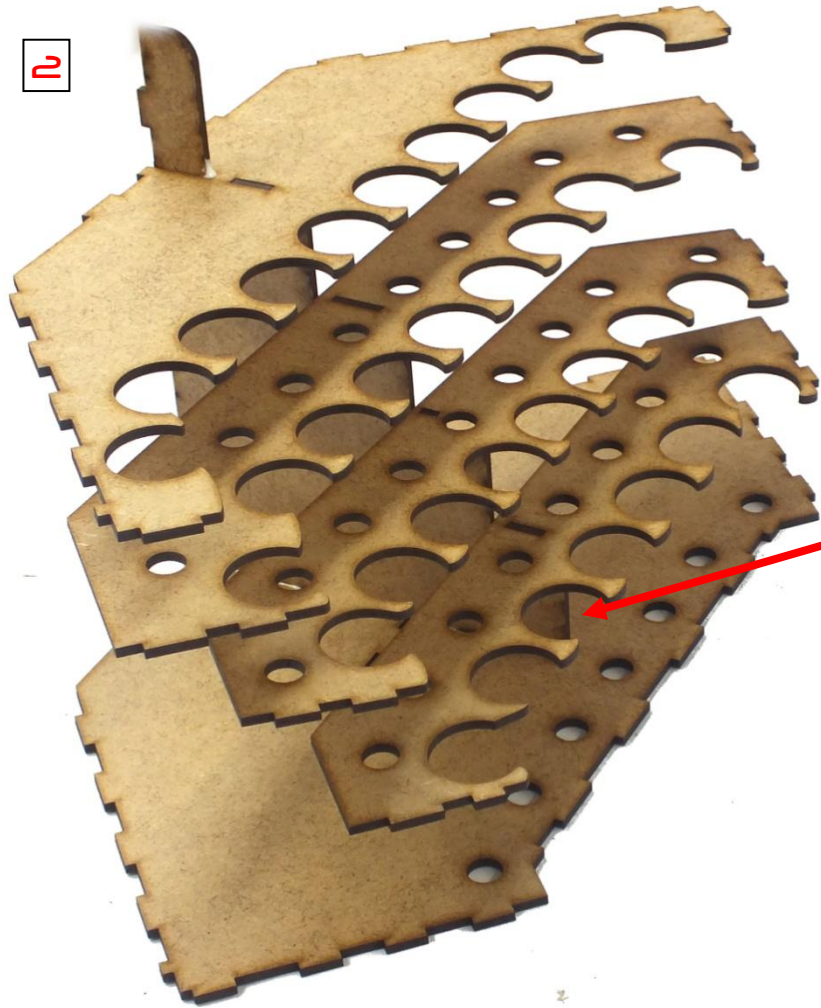


2 first glue in the 4 paint holders into the tabs of middle strut (they only fit in the right slits).

Glue the middle strut into the base plate.



3 glue on the 2 side walls, tabs all the way in.


4

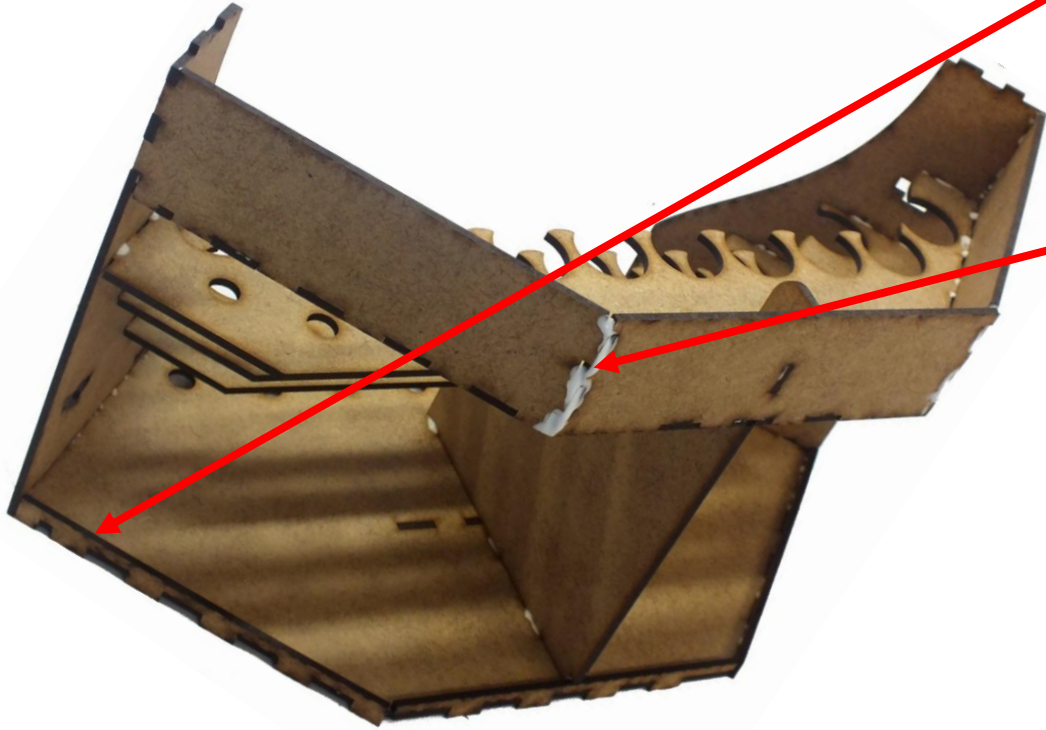

4 then glue in the 3 slim strips at the bottom and the 3 larger ones at the top.

Make sure to put plenty of glue between the large ones to close the gap of the angles.

5


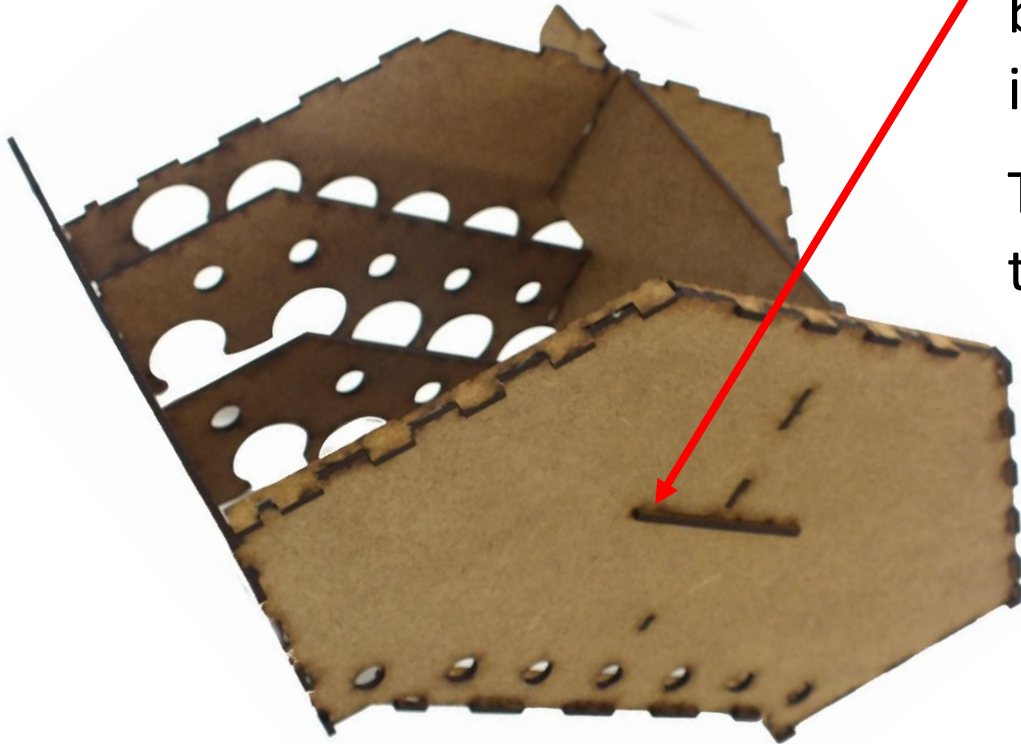


5 Glue in the slim strip with 3 tabs into the slots from the bottom. Careful not to break it.

The strips from 4 stick out at the bottom. This is correct.

6

6 Glue the front support strip (4 slits) onto the front of the base plate, and ensure that the whole module is straight.

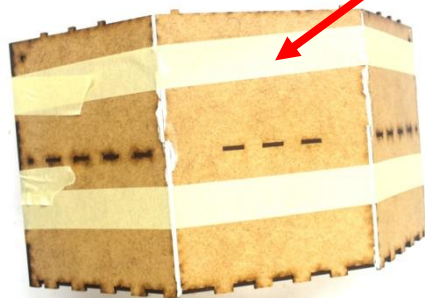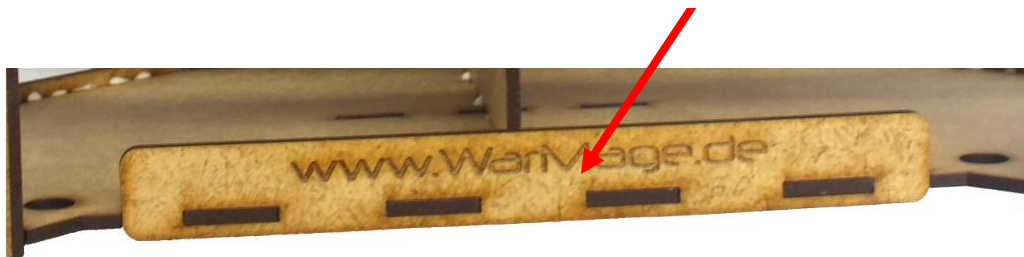

Tip: During glue drying time use masking tape to ensure proper angles / fit of the large back plates.