


Home Expansion – Corner Dropper, stackable

READ General Instructions FIRST!


TIP: Most pieces fit together without glue. Do a test run first, before gluing.

**Sheets:
HCDS-1 to -4**

1

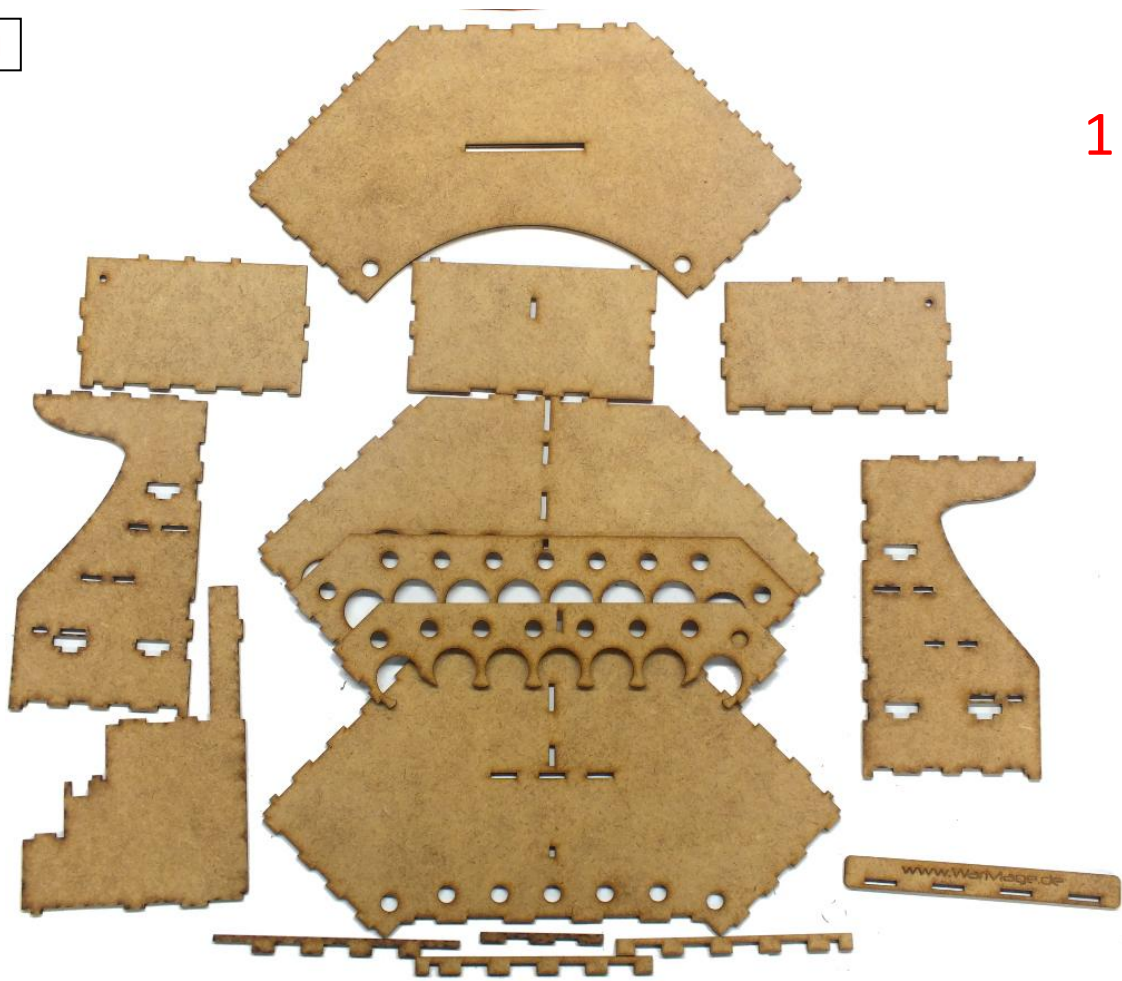

1 the pieces to be glued.

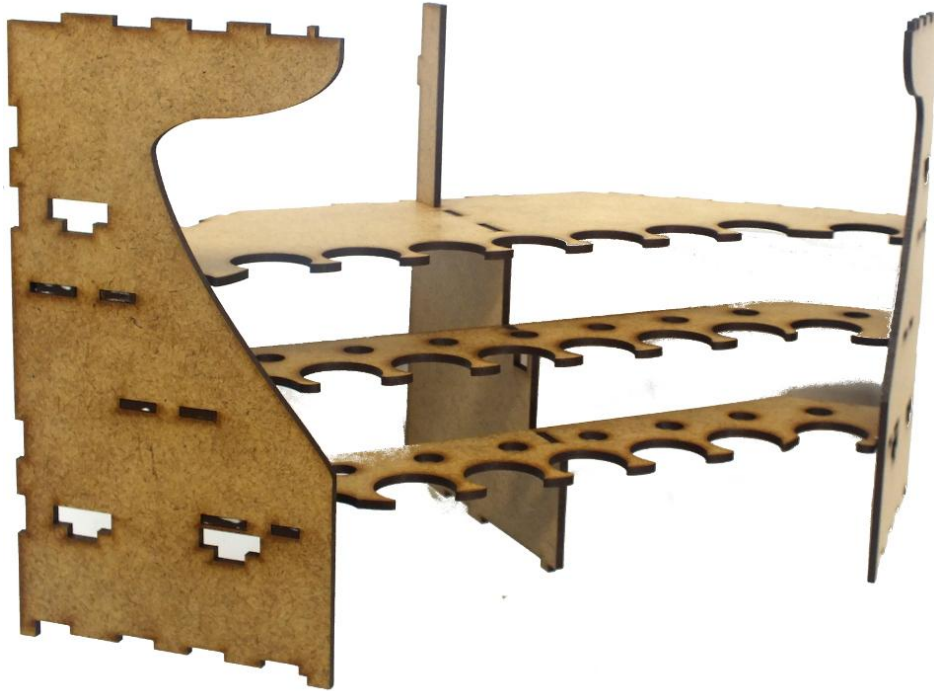


2 first glue in the 3 paint holders into the tabs of middle strut (they only fit in the right slits).

Glue on the 2 side walls, tabs all the way in.



3 Glue this into the
base plate.


4

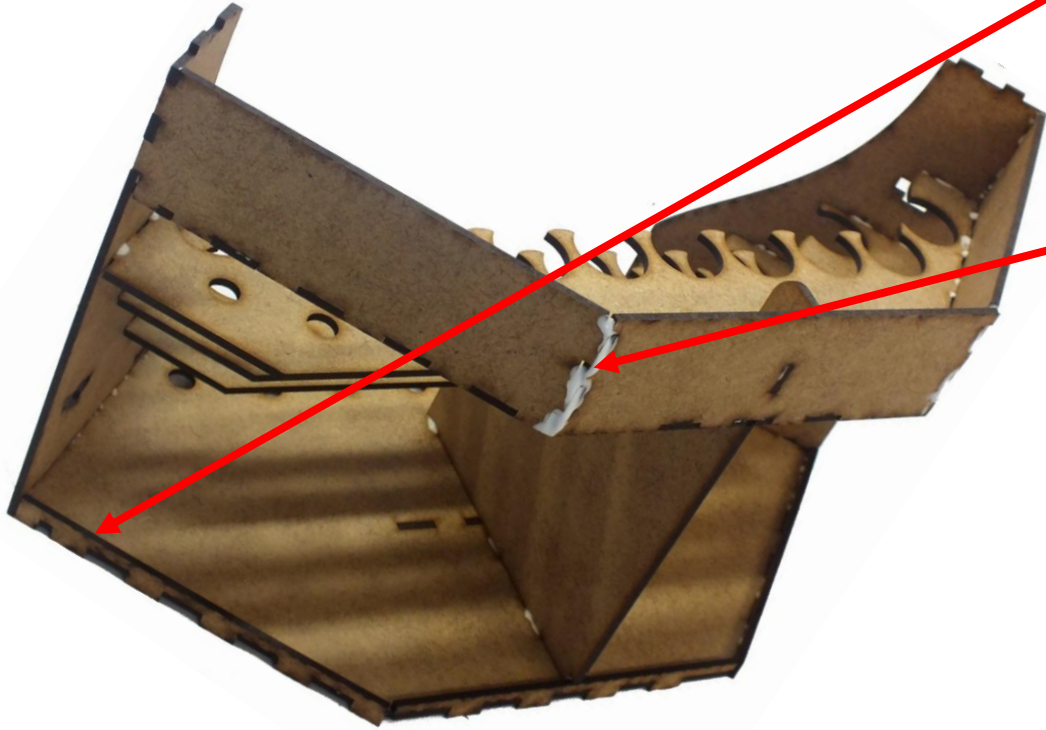

4 then glue in the 3 slim strips at the bottom and the 3 larger ones at the top.

Make sure to put plenty of glue between the large ones to close the gap of the angles.

5

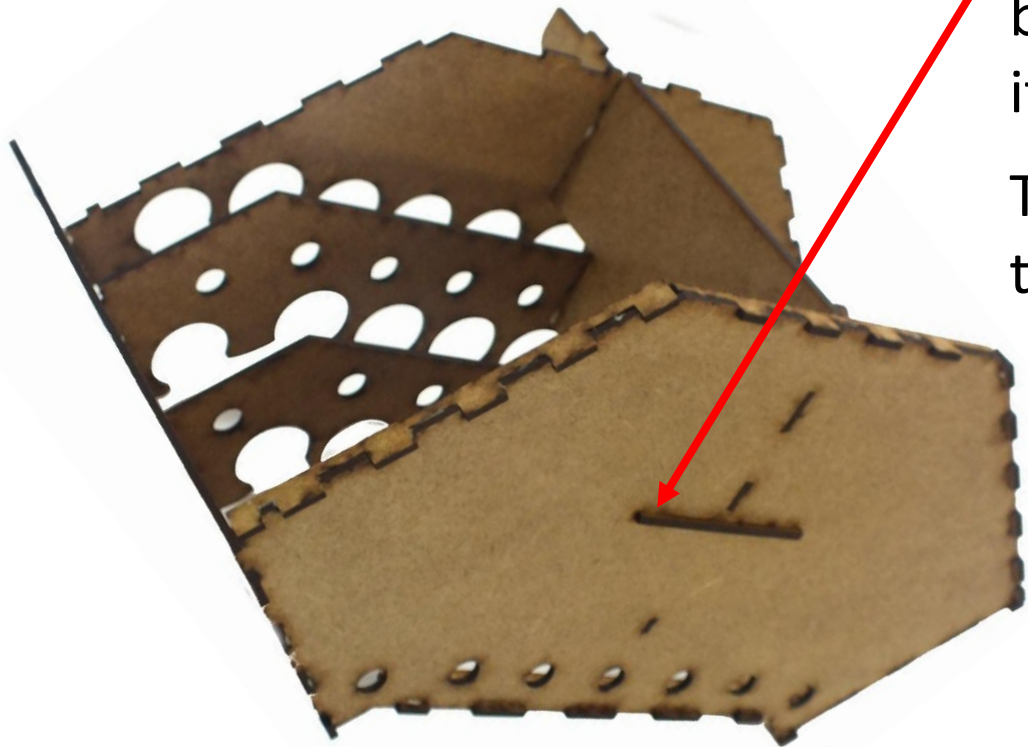


5 Glue in the slim strip with 3 tabs into the slots from the bottom. Careful not to break it.


The strips from 4 stick out at the bottom. This is correct.

6

6 Glue the front support strip (4 slits) onto the front of the base plate and glue on the top plate. Ensure that the whole module is straight.

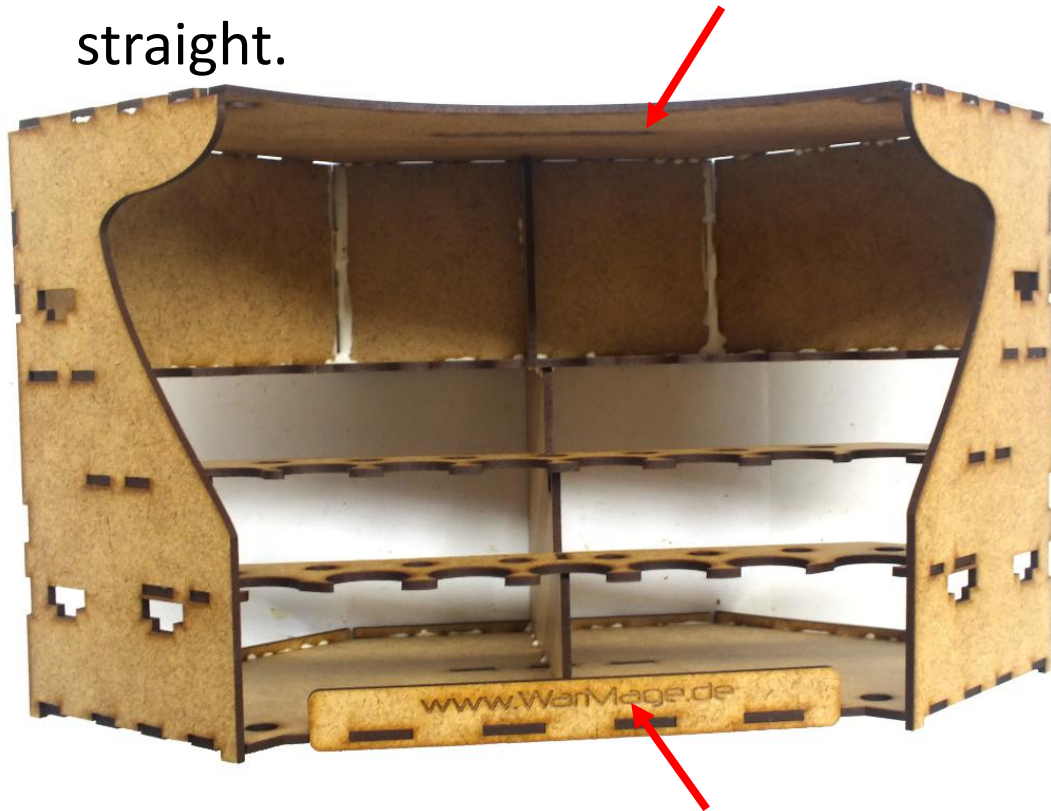

Tip: During glue drying time use masking tape to ensure proper angles / fit of the large back plates.

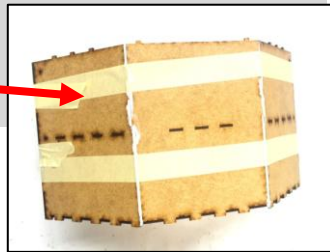

©www.WarMage.de

Industriestraße 24 | 27751 Delmenhorst | Germany

All rights reserved. All designs copyrighted.

Reproduction, also partial, not permitted.

This is not a toy. Recommended for ages 14 & up