


Home Expansion – 4 Spray Can & Drawers module

READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

**Sheets:
HSD-1 to -5
& single piece**

1

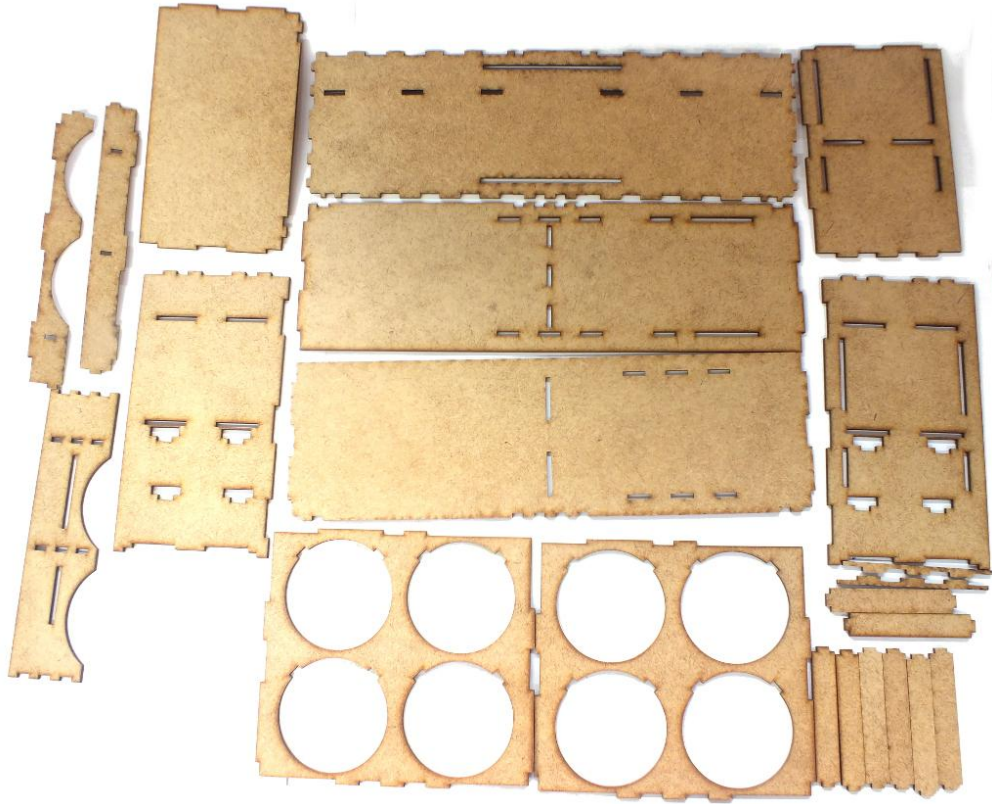


1 the pieces to be glued.

This unit can be assembled with spray cans on left or right side



2 first glue in the 2 spray can holders into the slits of the middle wall.

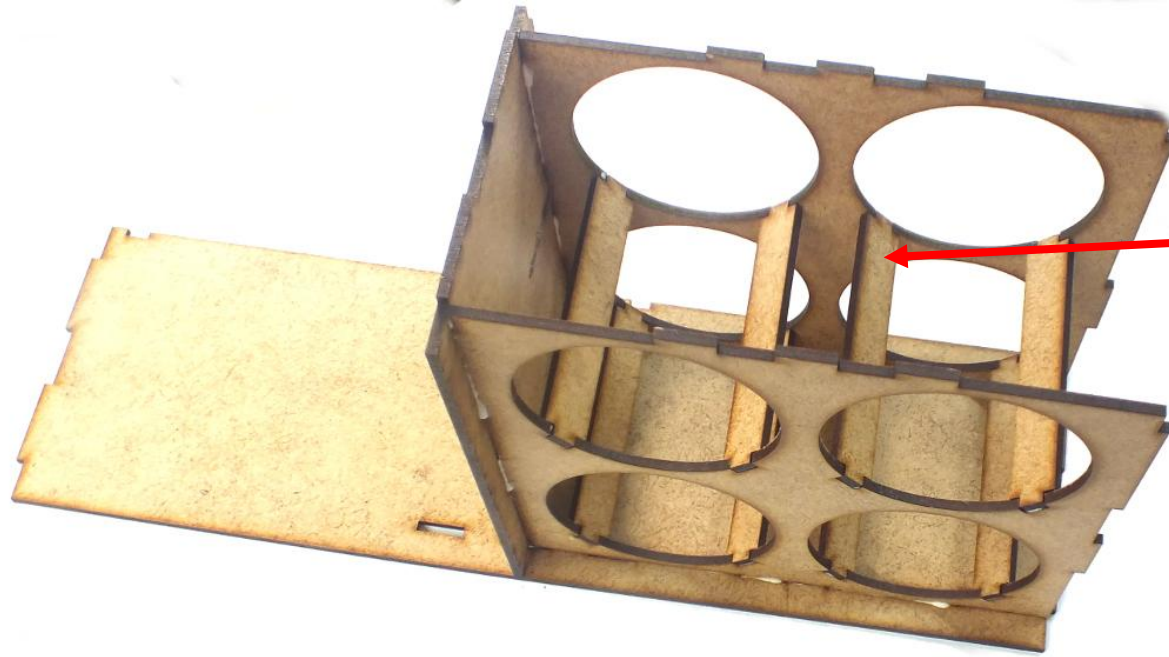

3 Glue this into the bottom plate.

Glue in all the support strips into the cutouts of the spray can holders.


4

4 then glue the middle shelf and the upper shelf (tabs towards the back, where there are other tabs)




5

5 glue on the 2 sidewalls, tabs to the back.

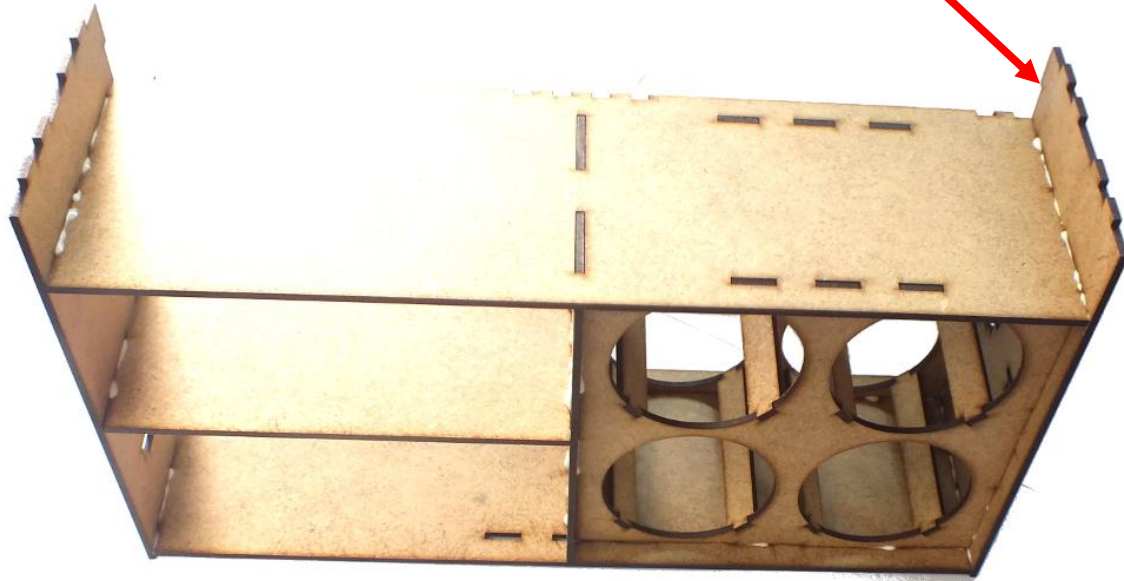

6

6 glue on the upper plate, then the 3 support strips at the back, round cutouts where the spray cans are. Ensure right angles.

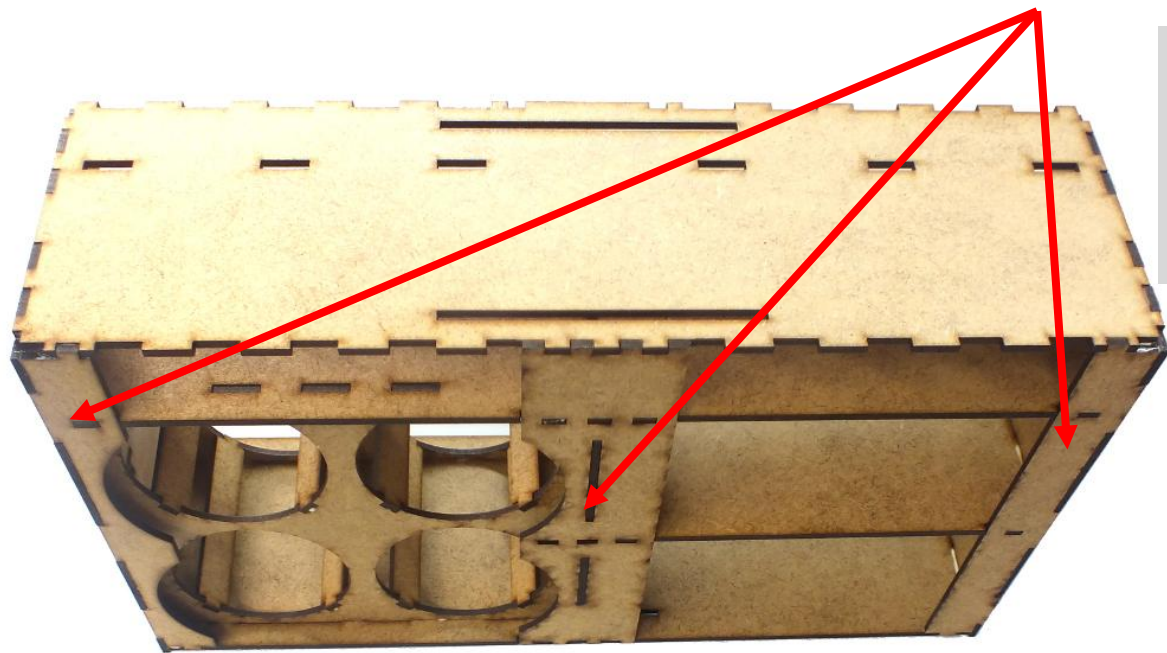

Tip: During glue drying use vice grips to ensure right angles / fit.


7




7 Also glue in the 2 small strips with the 3 tabs into the slits of the bottom from below



**3 Drawers:
All assembled the same
way, but different sizes.**

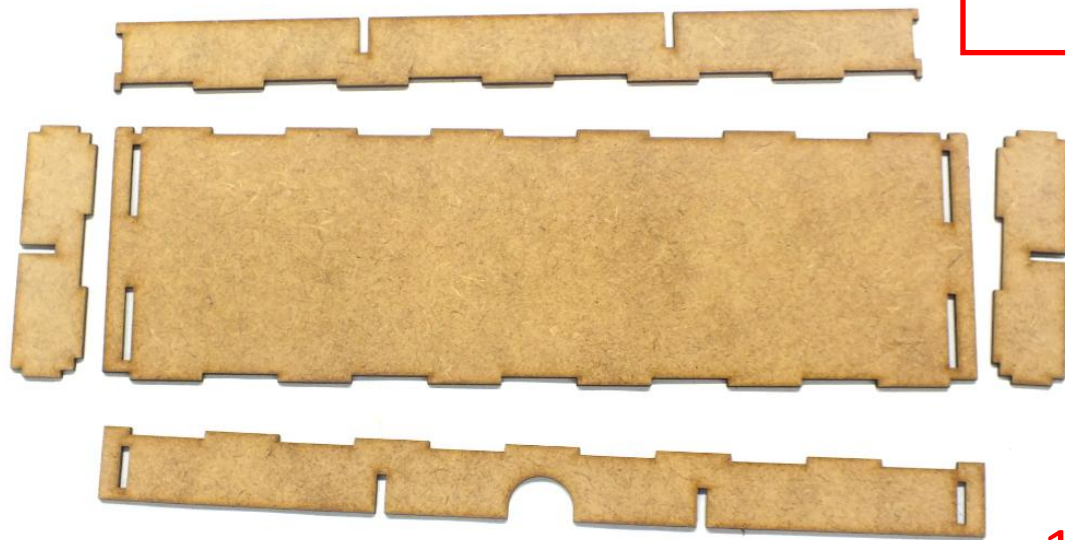


1 the pieces that need to
be glued together.

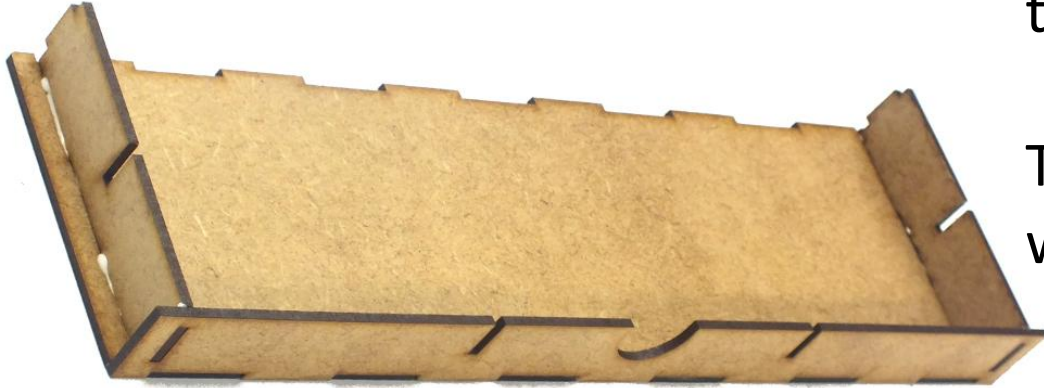

2 first glue in the 2 sidewalls into the slits of the bottom.

Then glue in the front wall.

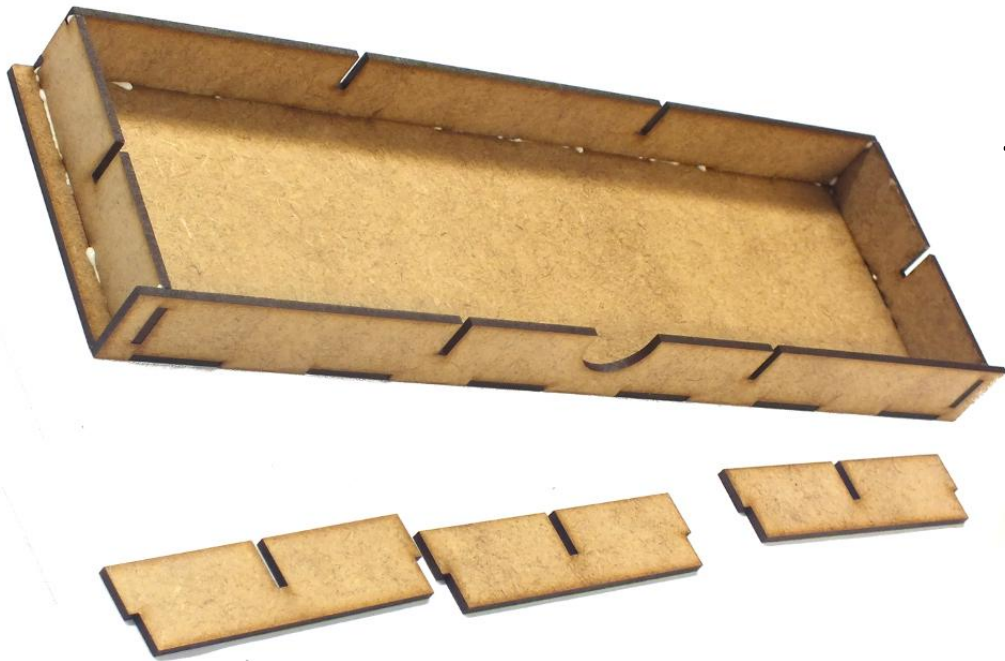

3 glue in the back wall.
Ensure right angles.

The dividers can be inserted
as needed without glue.

©www.WarMage.de
Industriestraße 24 | 27751 Delmenhorst | Germany
All rights reserved. All designs copyrighted.
Reproduction, also partial, not permitted.
This is not a toy. Recommended for ages 14 & up