


Home Expansion – 8 Spray Can module

READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

**Sheets:
H8C-1 to -4
& single piece**

1

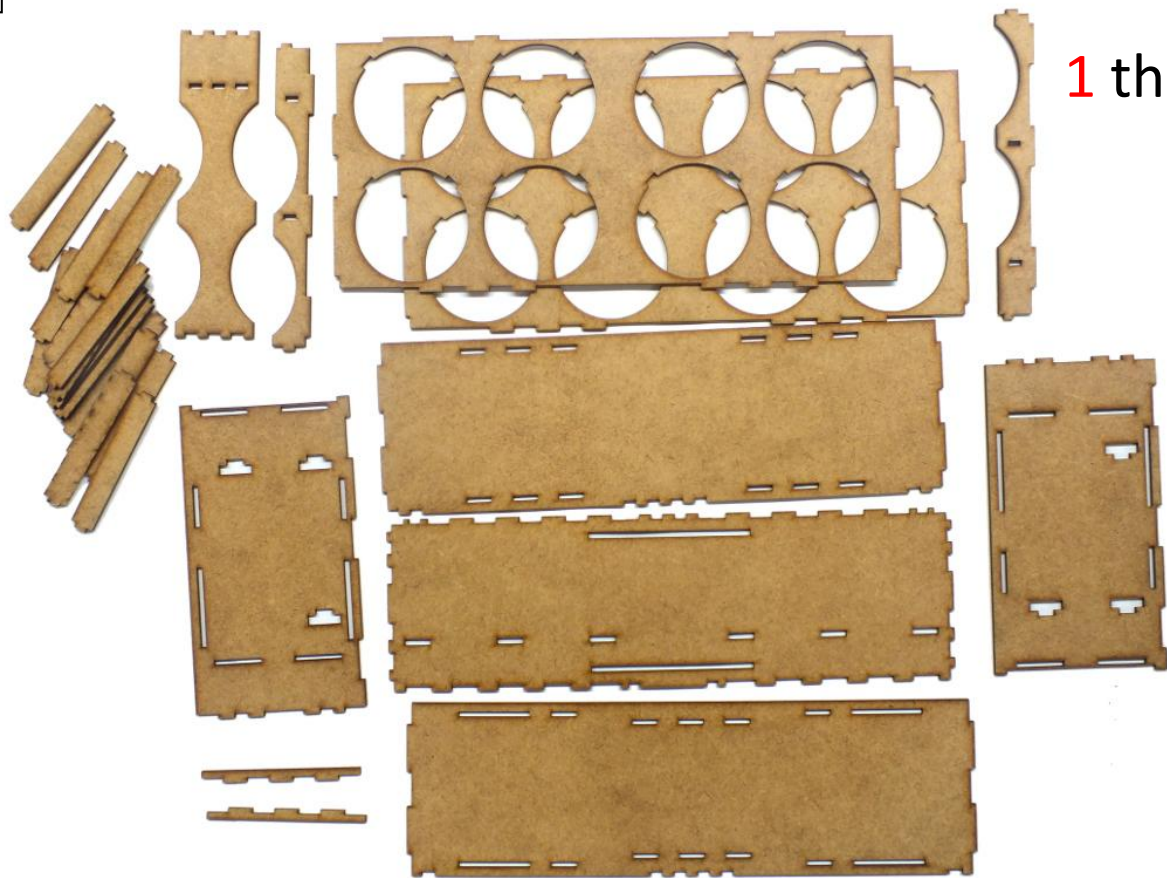


1 the pieces to be glued.



2 first glue in the 2 spray can holders into the slits of the bottom.



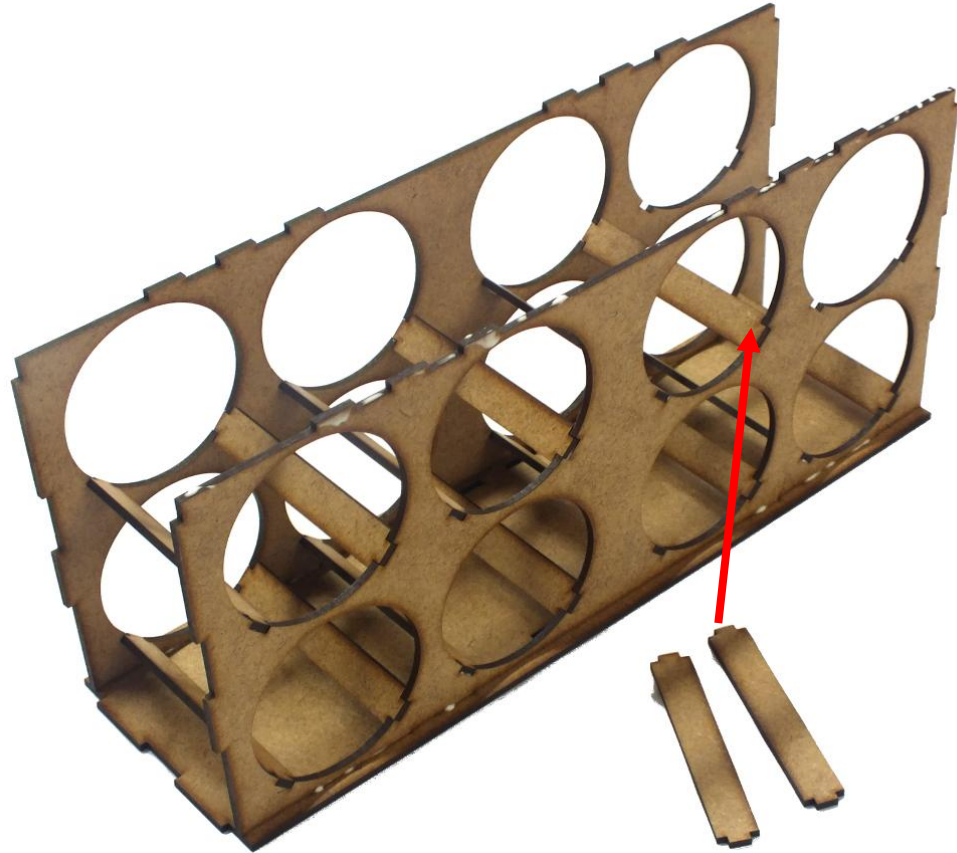

3 glue in all the support strips into the cutouts of the spray can holders.

4

4 then glue the middle plate and then one side wall (tabs towards the back, where there are other tabs)




5

5 glue on the other sidewall and the top plate.



6

6 glue on the 3 support strips at the back. Ensure right angles. Also glue in the 2 small strips with the 3 tabs into the slits of the bottom from below

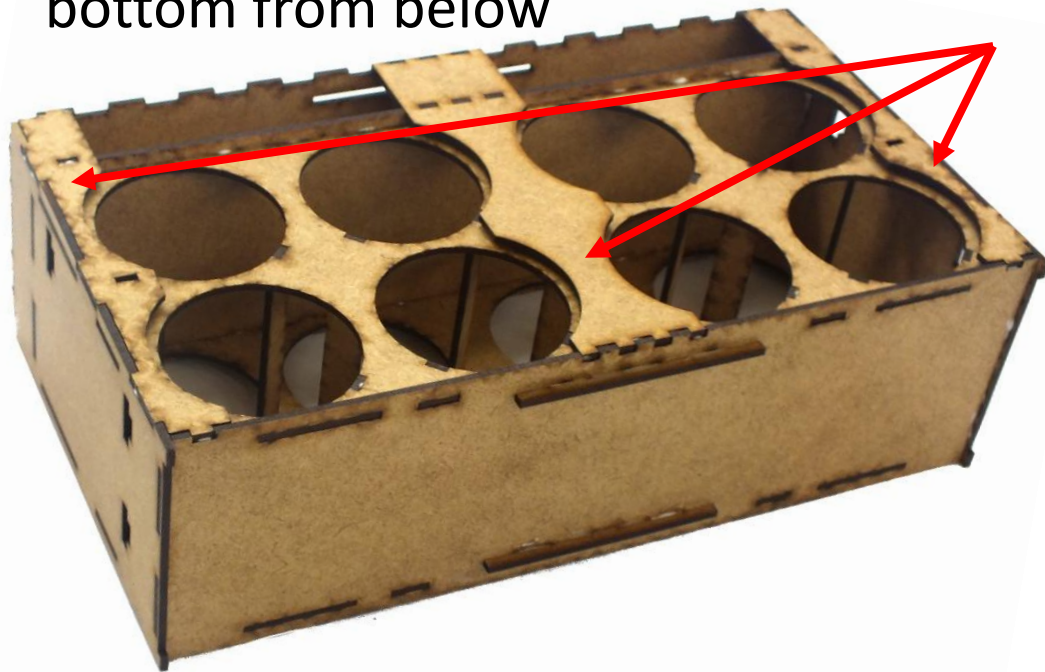


Tip: During glue drying use vice grips to ensure right angles / fit.



Drawer


1 the pieces that need to be glued together.

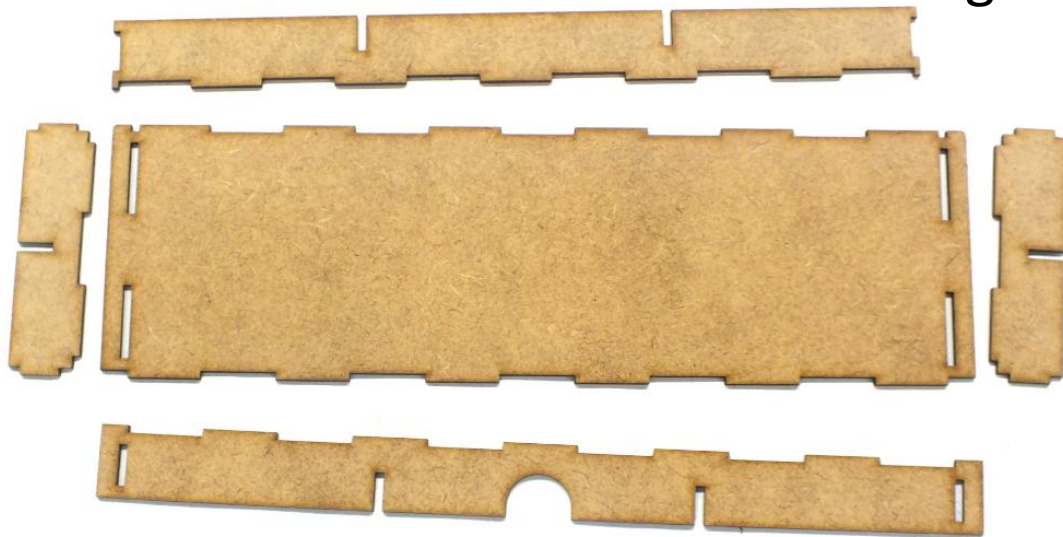



2 first glue in the 2 sidewalls into the slits of the bottom.

Then glue in the front wall.

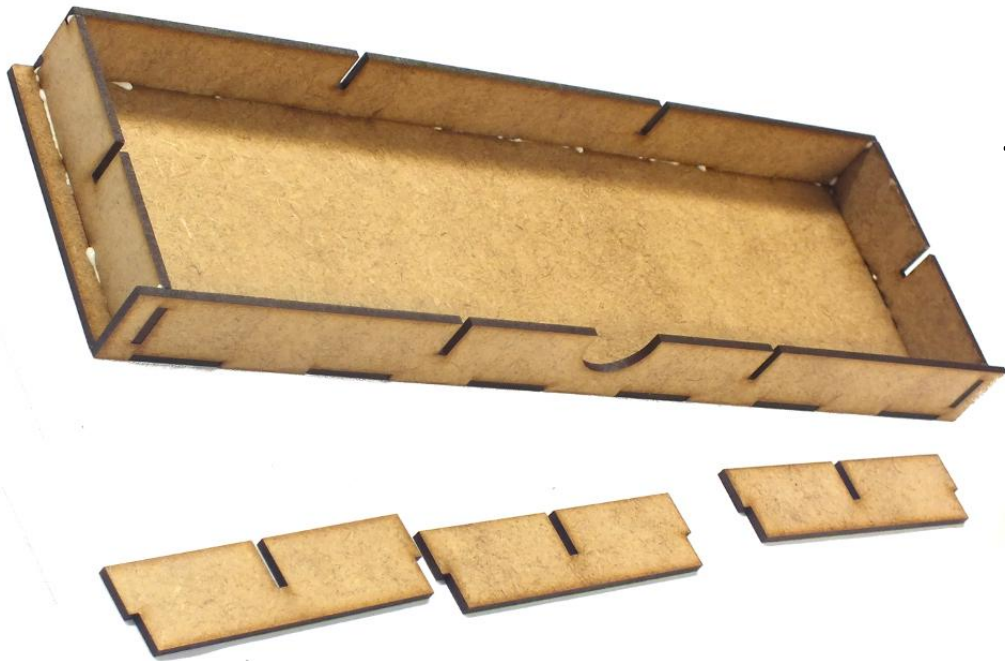

3 glue in the back wall.
Ensure right angles.

The dividers can be inserted
as needed without glue.

©www.WarMage.de
Industriestraße 24 | 27751 Delmenhorst | Germany
All rights reserved. All designs copyrighted.
Reproduction, also partial, not permitted.
This is not a toy. Recommended for ages 14 & up