


Large Dropper drawers

READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

**Sheets:
DDL1, DDL2**

1

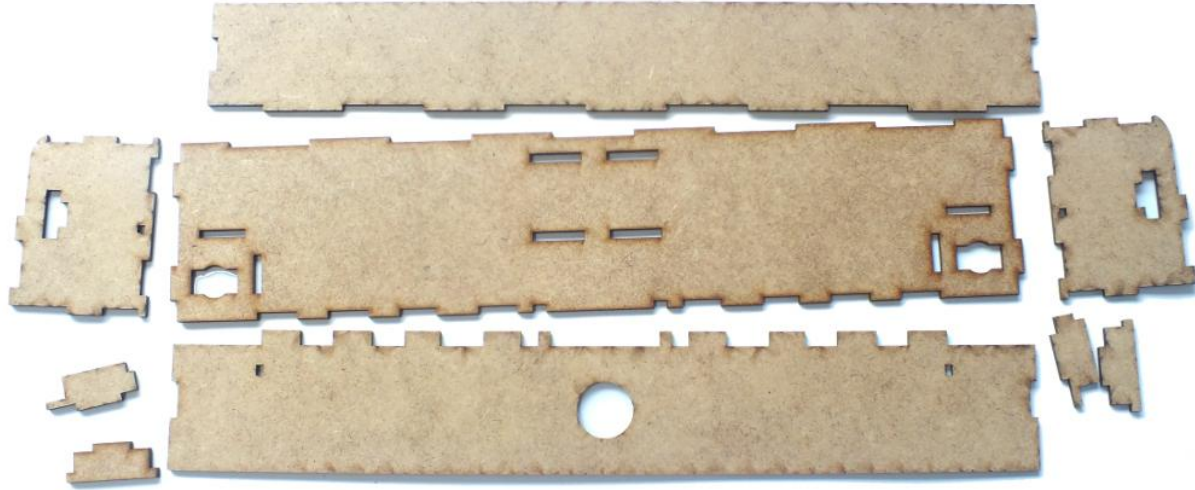


1 Lower drawer:
the pieces to be
glued.

**Upper and lower
drawers.** The
lower drawer
has the slightly
longer pieces



2 Lower drawer:
glue the 2 little pieces into the slits by the keyholes as shown on both sides.

The small tab sticks out on the narrow side.

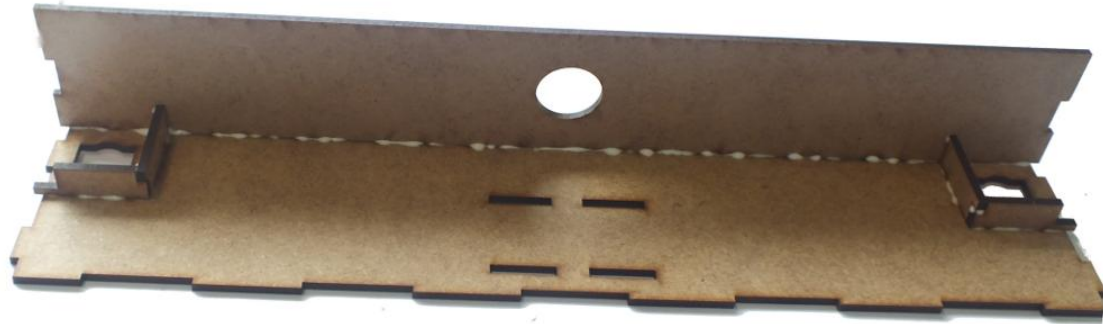

3-5 lower drawer:

Glue together from bottom, 2 sides, back and front walls.

Make sure the tabs from step 2 go into the holes of the back and side walls.

4




5



The "Bones" are to connect units to each other. No glue.

Large Upper Drawer:

6 Upper drawer: the pieces to be glued.

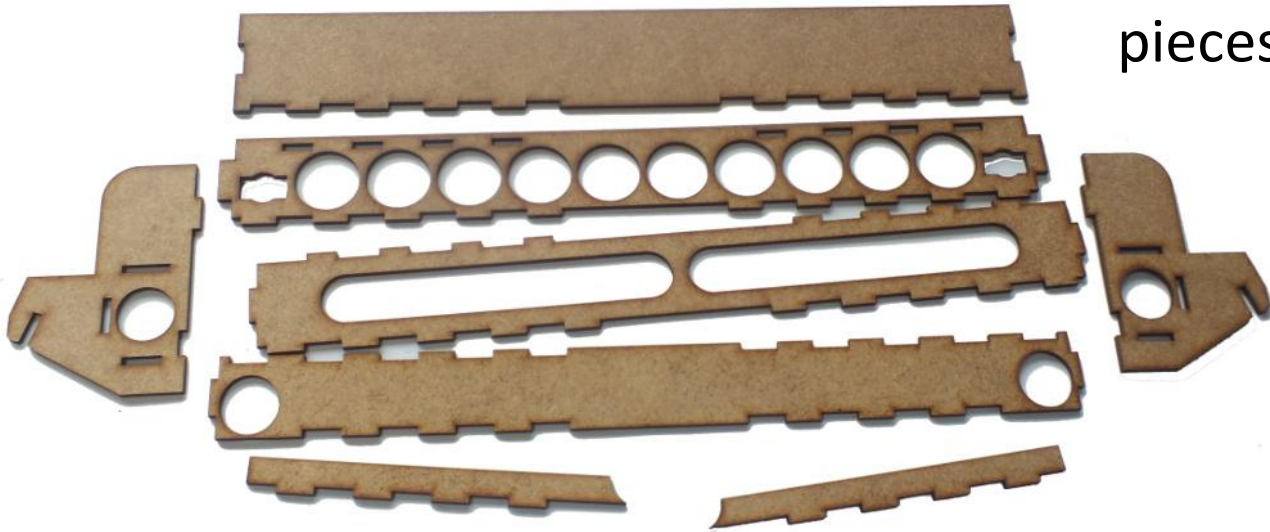

7



7 upper drawer: first glue on the front wall (with elongated slit) into the slits of the paint holder.

Then glue on the bottom plate to the front wall.


Ensure right angles.

8

8 glue on the side pieces.
They only fit in one way.
On each side, one tab
sticks out. This is correct.



9

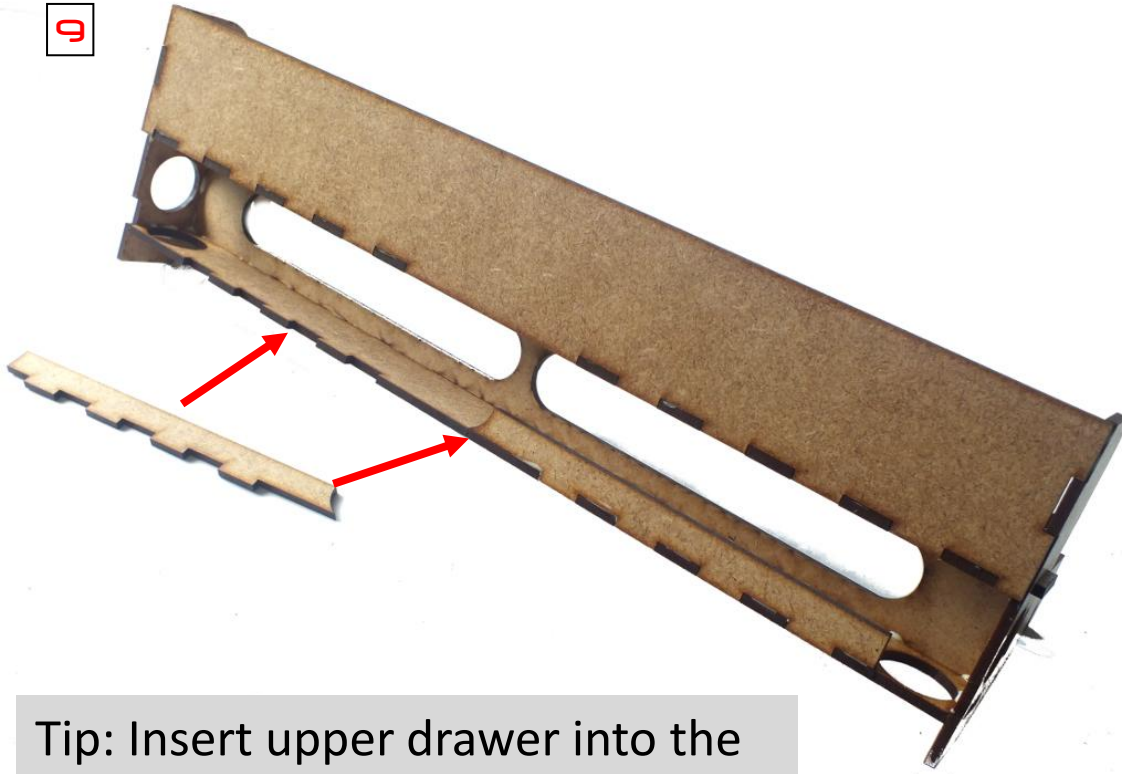

9 Glue on the back wall and the 2 narrow strips at the bottom of the back at a right angle and the rounded off side to the center.

Tip: Insert upper drawer into the lower one during glue drying time so that everything fits together. They are fitting snugly.

©www.WarMage.de
Industriestraße 24 | 27751 Delmenhorst | Germany
All rights reserved. All designs copyrighted.
Reproduction, also partial, not permitted.
This is not a toy. Recommended for ages 14 & up