

Small & Large Station upper plate

READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

Sheets:

The large plate with the least amount of slits in it. No number.


1



1 Cut the upper corners out of the cutting mat with strong scissors or a sharp blade, so that the locking keys can freely move.

There are little lines cut into the upper plate that will guide you.

2

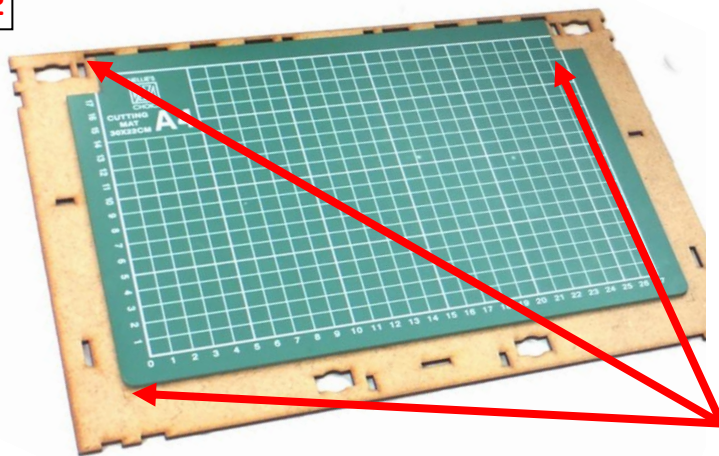

Tip: weigh down with around 20 KG of weights during glue drying time, so that there are no gaps between the layers!

Don't let glue show anywhere! Upper plate may require a bit of wiggling / pushing to get it in place during assembly of the box.

2 make sure the keys can move freely. The cutting mat has to be positioned so that at the front, the carry handle plate is not obstructed, and at the back, so that all the slits are completely open.

There are little lines cut into the upper plate that will guide you.

Glue the cutting mat in place with e.g. super glue. It goes to the outside when putting the box together.

©www.WarMage.de

Industriestraße 24 | 27751 Delmenhorst | Germany

All rights reserved. All designs copyrighted.

Reproduction, also partial, not permitted.

This is not a toy. Recommended for ages 14 & up