

large Dropper paint holder for Small Paint Station

READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

Sheets:


SD-03,04,05

One side wall on each sheet: SD-06, SD-07

1



1 the pieces that need to be glued together.

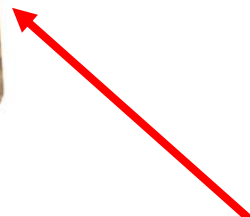

**Use sidewalls with two tabs on top.
(one on each sheet of the small paint holders)**

2



Steps 2 to 4 are only if you have the LED lamp.

2 IF YOU HAVE THE LAMP ONLY:
the pieces that need to be glued together for the lamp holder. They are on the sheet for the lamp.



3 IF YOU HAVE THE LAMP ONLY:

glue 3 of the keyhole plates on top of each other. Ensure that, on the long side, they are alternating between 2 tabs, then 1 tab, then 2 tabs again.

Now glue this into the slots of the small side plates. Very exactly, and fully inserted. Flat sides facing the same direction.

No glue inside the keyholes! The keyholes have to line up perfectly!

4



4 IF YOU HAVE THE LAMP ONLY:

Glue this into the slots of the back wall, visible tabs facing downwards.

5

5 glue the rounded off pieces into the slits of the squarish plates, all the way. Ensure right angles.



6

6 then glue these into the back wall. Ensure right angles.

Also glue the front wall onto the paint holder.



7

7 then glue the paint holder into the back wall.

Ensure right angles.



8

The brush holder can be stored here

8 Glue on the side walls and the bottom plate.

Ensure the bottom tabs from the little holders (step 4 & 5) go into the slits of the bottom



9

Don't let glue show anywhere.

9 Lastly, glue in the short strip with 3 tabs into the 3 slots at the bottom from below. Careful not to break it.

Tip: During glue drying use vice grips and insert the paint holders into the bottom plate to ensure right angles / fit.

