

small / large low dropper paint holders for Ultimate version

READ General Instructions FIRST!

TIP: Most pieces fit together without glue. Do a test run first, before gluing.

SMALL:


UDS1 & UDS2

One on each sheet

LARGE:

UDA1 & UDA2

1 the pieces that need to be glued together.
Assemble twice the same way

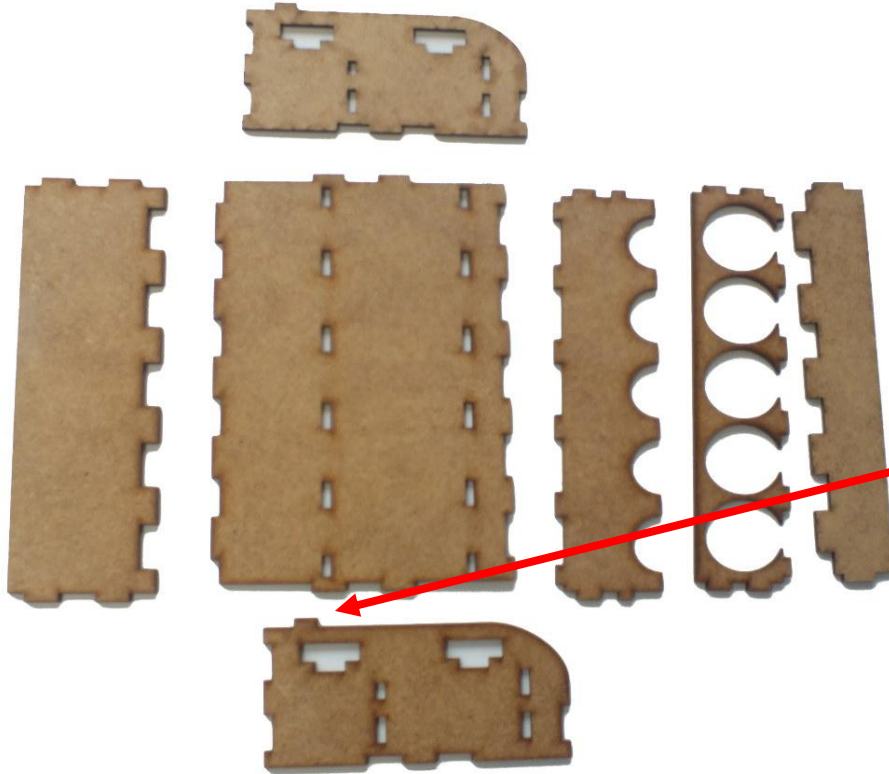


Sidewalls with one tab on top

Remaining parts of UDS1 & UDS2 are for middle / upper plate.



2 first glue in the 2 paint holders.

Carefully, they can break easily if you apply too much pressure.

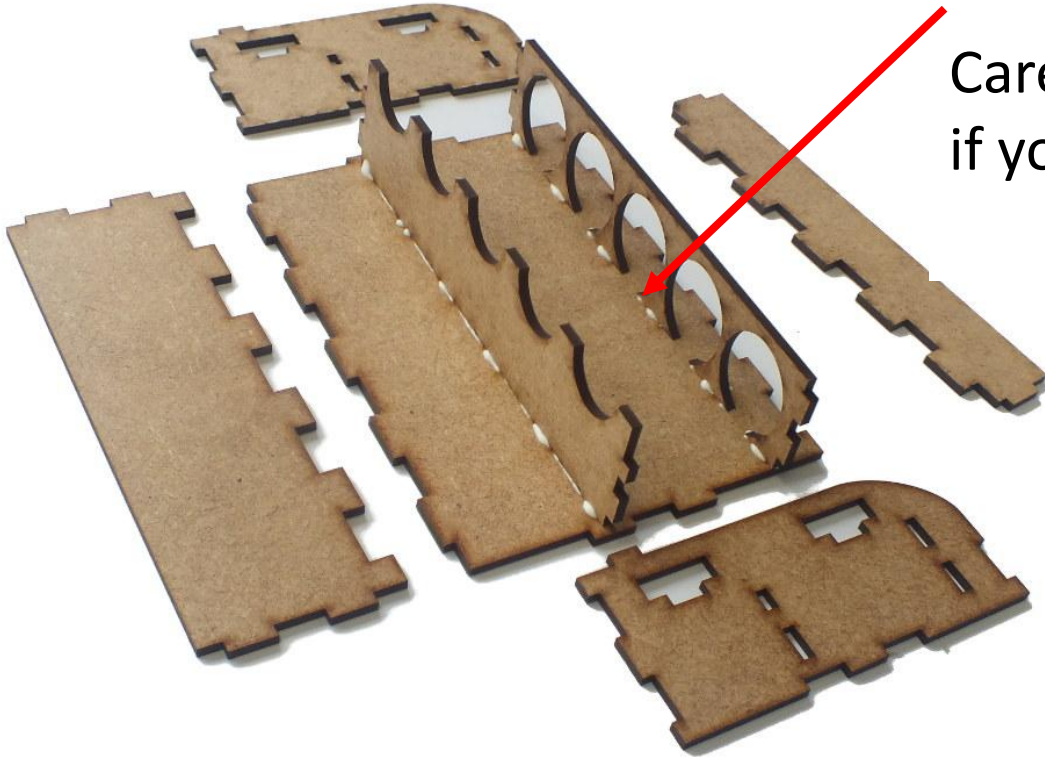

3 then glue in the sidewalls.





4 glue in the back and front walls. Ensure right angles

5




5 the front and back walls stick out on the bottom, which is correct.

Tip: During glue drying use vice grips and insert the paint holders into the bottom plate to ensure right angles / fit.

Don't let glue come out anywhere.

Additional steps for the large low dropper holder

6

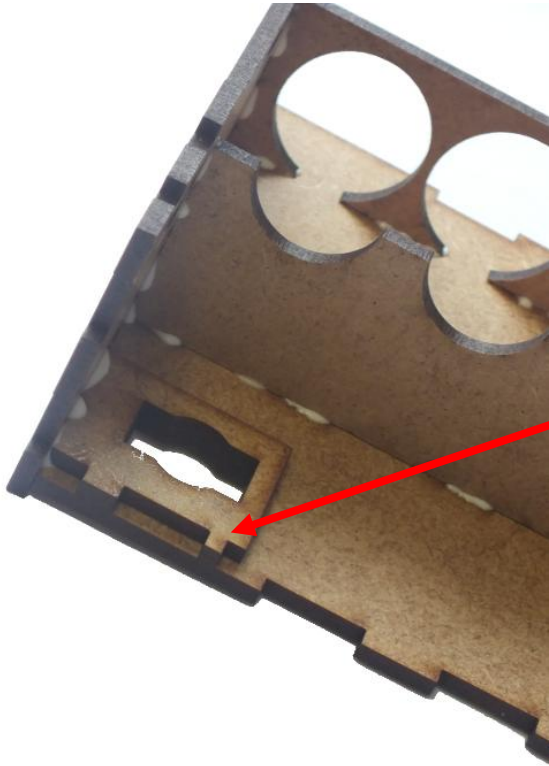


**Sheets:
UDA-1 & UDA-2**

6 For the large paint holder, during step 3 glue in the 2 keyhole plates fitting into the inside corners. The little tabs go into the side & back walls. Make sure there is no glue in the key holes and that they are exactly matching!

7

7 For the large paint holder, glue the small strip with 3 tabs into the 3 slits from below.

Careful not to break it.

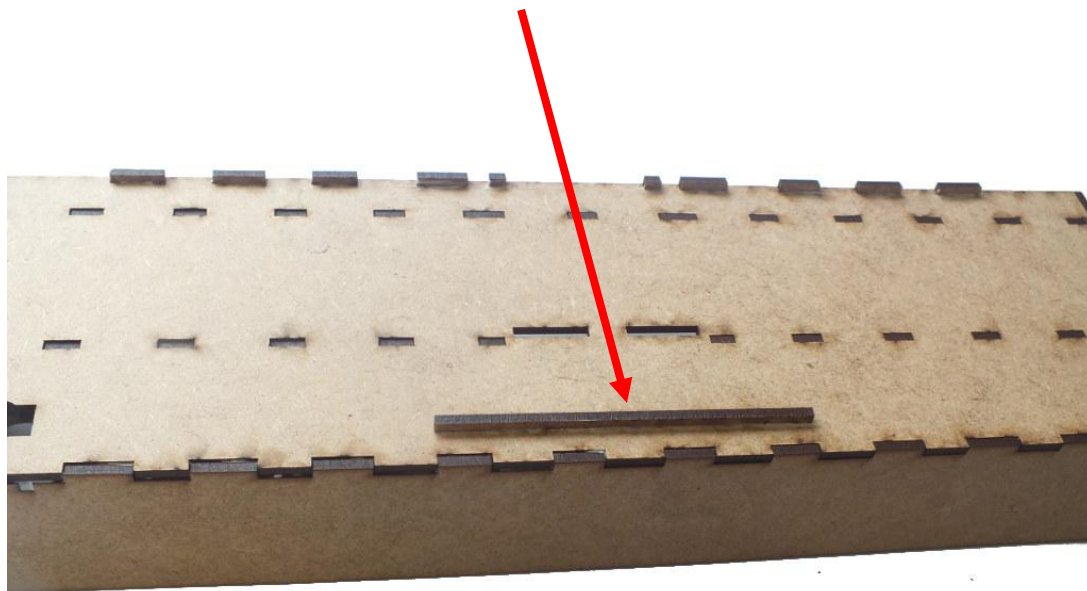

**Remaining parts of
UDA2 are for small
storage box – Ultimate
& connectors**

©www.WarMage.de

Industriestraße 24 | 27751 Delmenhorst | Germany

All rights reserved. All designs copyrighted.

Reproduction, also partial, not permitted.

This is not a toy. Recommended for ages 14 & up