

Wet Palette

READ General Instructions FIRST!

CAUTION: Liquids

The material for the kits is MDF, which is made from wood.


Do not let any liquids soak into the material!

Always completely empty and dry off the water pots and wet palette before transport.

Ensure all paints are properly closed.

If the surface gets wet, wipe the liquid away quickly.


1

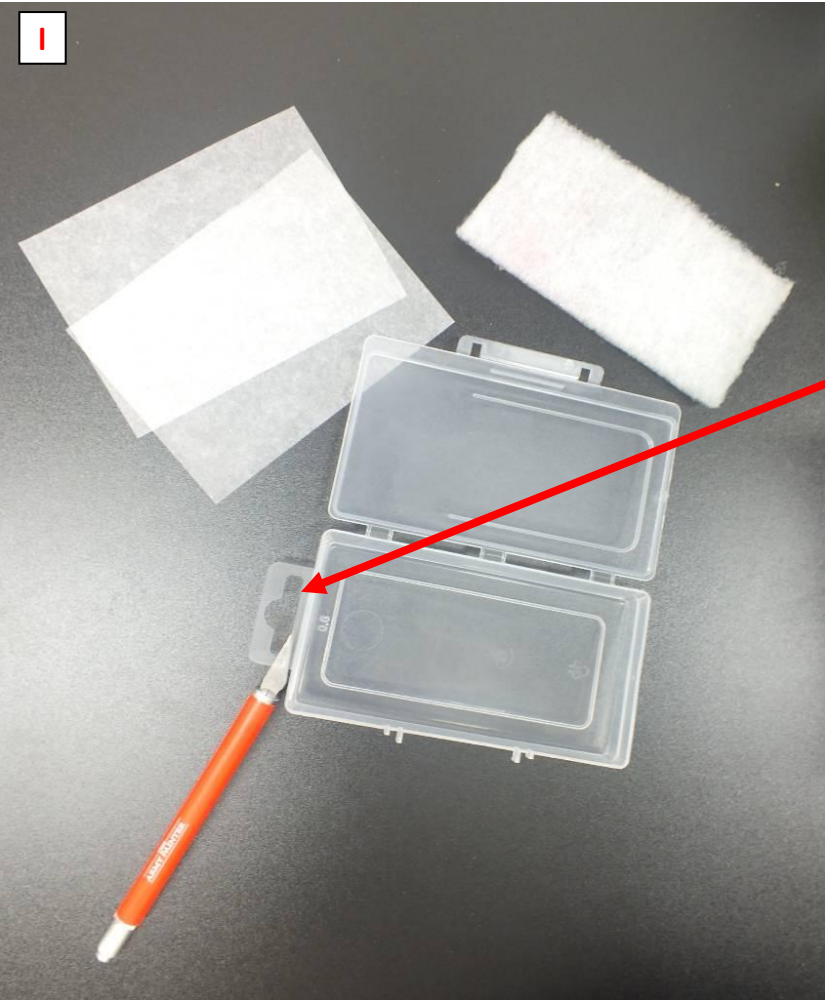

1 completely cut of the tab on the side with a sharp knife. Do not cut into the wet palette itself.

Store inside Water Pot Box

2

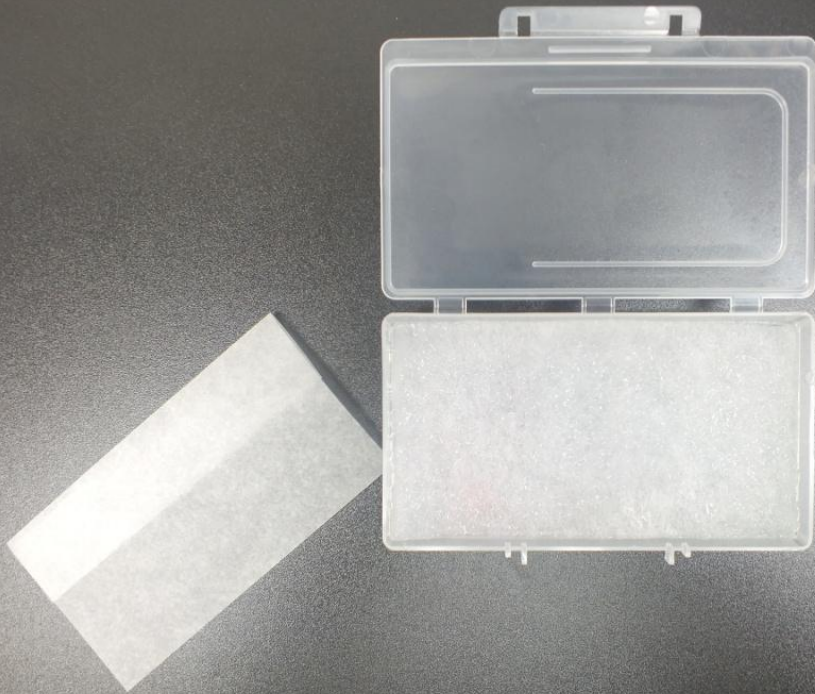

2 fill with water, so that the sponge material is completely covered, but just.

Fold over about $\frac{1}{4}$ of the paper, or cut off. Replace with coated oven baking paper

3



3 place the paper on the sponge. Make sure the underside is completely wet.

Close lid when not in use to prevent drying out of paints.

Paints will stay wet several hours with lip open and several days with lid closed.

Rise out and completely dry off sponge and wet palette before storing in the Paint Station.

Press sponge in between paper towels several times to get it fully dry.